

Replacement Filters

Replacement filters are available from your Vax stockist or Vax direct. Phone Vaxcare or visit: www.vax.com.au

VAXCARE Service & Help:
AUSTRALIA 1300 36 4040
NEW ZEALAND 0800 800 900

If you have any queries or concerns about using your Vax, call VAXCARE.

Please make a note of the serial number and model number of the appliance before calling. (Aust only: Mon-Fri. 10.00am to 6.00pm. EST) Calls are charged at the local rate.

An answerphone is available outside of these hours.

There are over 300 approved Vax Service Agents in Australia and New Zealand. For the nearest Service Agent, please refer to your Vax warranty or call VAXCARE or visit www.vax.com.au



www.vax.com.au

Vaxcare:
AUST: 1300 36 4040
NZ: 0800 800 900



IMPORTANT: For maximum Ni-Cd battery life and to avoid memory effect, fully discharge the battery (by running down) then completely re-charge at least once a month.

Installation

Insert the charging bracket into the floor stand and connect the charger to the floor stand (Fig.1). Connect the swivel nozzle to the main body (Fig.2).

Put the floor unit on the floor stand for recharging (Fig.3)

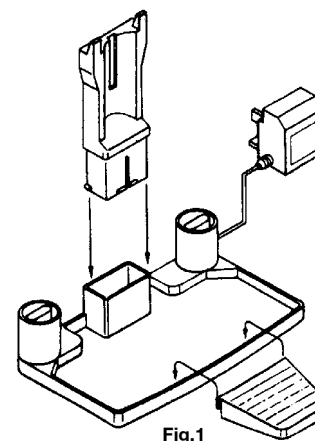 
 


Fig.1

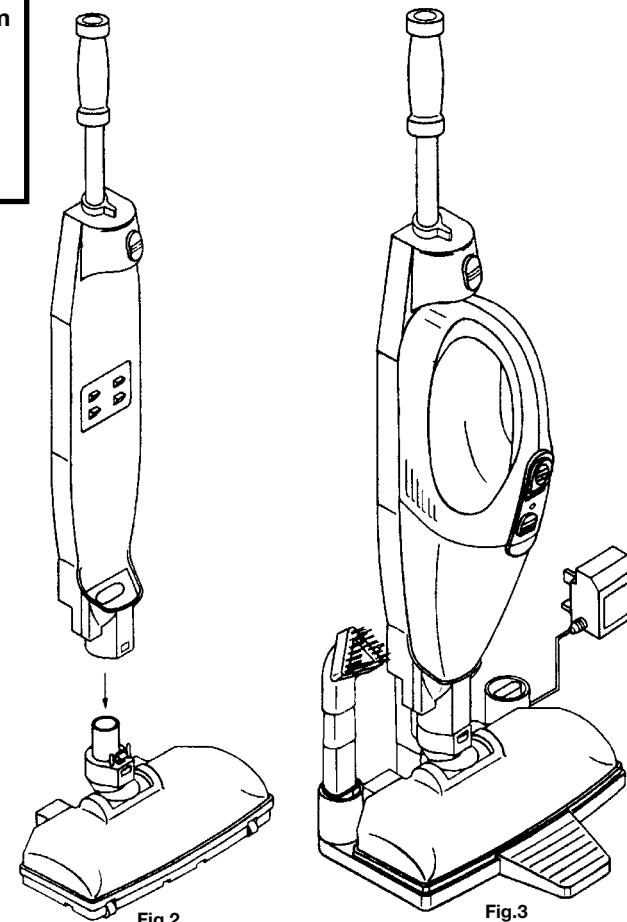 


Fig.2

Fig.3

VAXCARE

Please register your warranty. Send in your completed Warranty Card.

If you require any further assistance or advice about any VAX please call VAXCARE on
1300 36 4040 (Australia - cost of a local call)
and **0800 800 900** (NZ)



VAX Appliances (Australia) Pty Ltd
A.C.N. 009099736

296 Victoria Road Malaga Western Australia 6090.

EMAIL: vaxcare@vax.com.au

WEBSITE: www.vax.com.au

Vax AUSTRALIA & NZ BRANCHES

- **NSW/ACT**
Unit 2, 30 Heathcote Road,
Moorebank, New South Wales 2170
Ph: (02) 9602 6800 Fax: (02) 9602 6900
- **QUEENSLAND**
186 Kerry Road,
Archerfield, Queensland 4108
Ph: (07) 3216 7350 Fax: (07) 3216 7375
- **VICTORIA/TASMANIA**
Unit 3, 46 Burgess Road,
Bayswater North, Victoria 3153
Ph: (03) 9761 7160 Fax: (03) 9761 7175
- **WESTERN AUSTRALIA**
296 Victoria Road,
Malaga, Western Australia 6090
Ph: (08) 9247 8100 Fax: (08) 9247 8192
- **SOUTH AUSTRALIA/
NORTHERN TERRITORY**
Unit 3, 75-77 Grange Road,
Welland, South Australia 5007
Ph: (08) 8340 2222 Fax: (08) 8346 7933
- **VAX APPLIANCES NEW ZEALAND**
27 Clemow Drive
Mt Wellington, Auckland
Ph: (09) 5736220 Fax: (09) 5736224
Email: vaxnz@vax.co.nz

Instructions For Use

Please read instructions in full before using this appliance.

Important Information

FOR HOUSEHOLD USE ONLY

When using an electrical appliance, basic precautions should always be observed, including the following:

- The vacuum cleaner requires some care to ensure correct operation. Please follow these instructions.
- This appliance is not intended for use by young or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
- The vacuum cleaner must not be charged where the temperature is lower than 0°C or higher than 40°C.
- The charger is warm during charging, this is normal.
- Always use original charging device intended for Aladdin.
- Always re-charge the Aladdin after use. If unused for long periods of time, keep the vacuum cleaner in a cool place and re-charge at least every 3 months.
- Always turn the vacuum cleaner off when changing filter.
- Do not vacuum clean surfaces which have been exposed to inflammable solvents before they are completely dry.
- Do not vacuum glowing particles which may cause a fire.
- Never lubricate the motor.
- Do not leave the vacuum cleaner in direct sunlight.
- If the vacuum cleaner is damaged by accident and the battery is exposed:
 - Do not leave the battery near a source of heat.
 - Do not short-circuit the battery.
 - Do not dismantle or open the battery.
- The vacuum cleaner contains a nickel cadmium (Ni-Cd) battery.
 - Do not throw away or burn the battery.
 - Dispose of battery properly.
- Service and repairs must be carried out by an Authorised VAX Service Agent.
- Unplug the charger from the outlet before any routine cleaning or maintenance.
- Do not put any object into openings.

- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.

SAVE THESE INSTRUCTIONS

Battery Information

- This product includes rechargeable nickel cadmium (Ni-Cd) batteries. Do not incinerate batteries or expose to high temperatures, as they may explode.
- Charge the battery for approximately 12 hours before using the vacuum cleaner the first time.

A fully charged battery lasts for up to 15 minutes of vacuum cleaning.

IMPORTANT: For maximum Ni-Cd battery life and to avoid memory effect, fully discharge the battery (by running down) then completely re-charge at least once a month.

Battery Disposal

The vacuum cleaner contains a 12 Volt Nickel Cadmium (Ni-Cd) battery pack. Dispose of battery properly. Refer to your local council or recycle centre for disposal information.



"Ni-Cd" BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY

Call your nearest recycling centre or local authority for information on the recycling and disposal of Ni-Cd batteries.

Instructions For Use

Charging

NOTE: The vacuum cleaner must be turned off before recharging. The Aladdin can only be connected to 220-240V, 50-60Hz supply. When the red light is illuminated the Aladdin is being charged. (When the Aladdin is in use the light is also red).


When Aladdin is completely discharged, 16 hours of charging is required to reach full capacity.

IMPORTANT: For maximum Ni-Cd battery life and to avoid memory effect, fully discharge the battery (by running down) then completely re-charge at least once a month.

Operation


Remove the floor unit from the floor stand for doing carpets or floor vacuum cleaning (Fig.4).

Fig.4

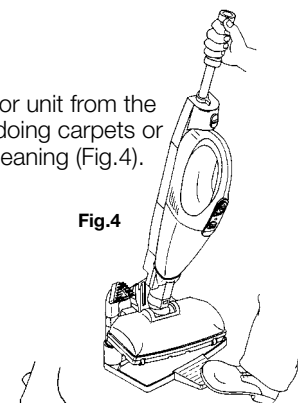


Adjust the telescopic handle to a suitable length (Fig.5). Switch machine on (Fig.5).

Fig.5

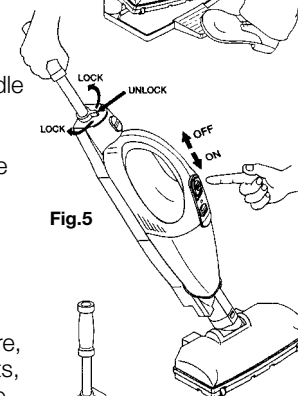


When vacuum cleaning items such as furniture, tables, car seats, release and use the hand unit only (Fig.6).

Fig.6

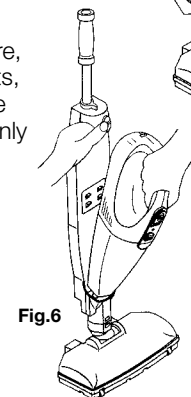


For places that are difficult to reach, use together with the crevice tool or brush (Fig.7).

Fig.7

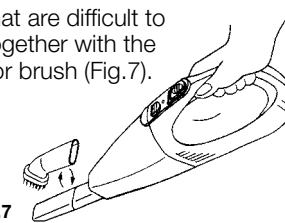

If necessary the vacuum cleaner (hand held) can be charged separately by connecting the charging socket directly to the vacuum cleaner. (Fig.8).

Fig.8

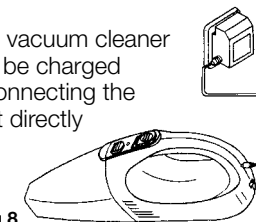


After finishing cleaning, put Aladdin into the charging stand to recharge.

Maintenance

Release the dust collector (Fig.9), and empty it (Fig.10a).

Fig.9

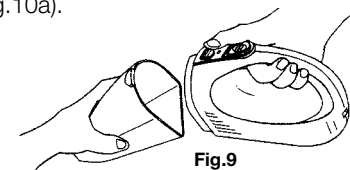

Clean the filter when it starts to fill up or, to maintain maximum cleaning efficiency, replace it with a new one after 4 or 5 uses (Fig.10b).

Fig.10b

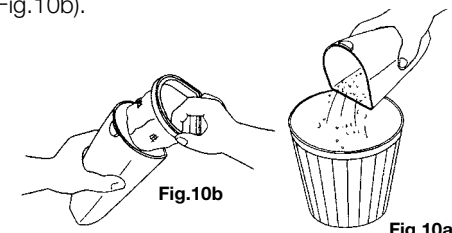


Fig.10a

Unscrew the brush cover, remove the power brush for easy cleaning (Fig.11).

Fig.11

