



# User Guide

Vax Service line: AU:1300 361 505  
NZ:0800 800 900

## Cordless Hand Vac

**LiNX**<sup>™</sup>  
**CORDLESS**



# Get Cleaning...

What's your Vax's model number?

L X H V 0 0 1 ■ ■ ■

What's your serial number? (Located on the base of the machine)

■ - ■ ■ ■ ■ ■ ■ - ■ ■ - ■ ■ - ■ ■ - ■ ■ ■ ■ ■ ■ ■ ■

Note these down in case you need them in future. Please keep instructions for further use.

[www.vax.com.au](http://www.vax.com.au)

**LXHV001**

# Machine Overview



## FRONT

- 1. Combination Crevice/Brush Tool
- 2. Fuel Gauge
- 3. On/Off Switch (0=OFF, I=ON)
- 4. Battery (Sold Separately)
- 5. Dirt Cup




## DIRT CUP

- 5. Dirt Cup
- 6. Pre-Screen
- 7. Filter (inside pre-screen)

## BATTERY & CHARGER

- 8. 18V Lithium Ion Battery
- 9. Battery Charger

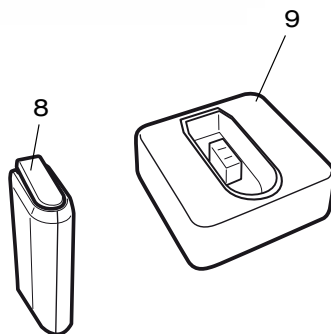

# General Safety Information

## FOR HOUSEHOLD USE ONLY.

When using the cordless upright vacuum cleaner, basic safety precautions should always be observed, including the following:

1. Do not charge outdoors.
2. Turn off the vacuum cleaner control before removing or replacing the battery.
3. Children should be supervised to ensure that they do not play with the appliance.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
5. Use only as described in this manual.
6. Do not use charger with damaged cord or plug. If the appliance is not working, as it should, has been dropped damaged, left outdoors, or dropped into water, return it to a Vax Authorised Service Agent or suitably qualified person for examination, repair or adjustment, simply call us on AU: 1300 361 505 / NZ: 0800 800 900
7. Do not abuse the charger cord. Keep the charger cord away from heated surface. Do not pull the charger cord around sharp edges or corners. Do not close the charger cord in a door.
8. Do not handle the plug or appliance with wet hands.
9. This product uses a rechargeable Lithium-Ion battery. Do not throw the battery into fire or expose to high temperatures, as it may burst.
10. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not pick up hot coals, cigarette butts, matches or anything hot, smoking or burning objects.
13. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc) or use in the presence of explosive liquids or vapour.
14. Do not vacuum up harmful or toxic material (chlorine bleach, ammonia, drain cleaner, etc).
15. Do not use without the filter in place.
16. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.

17. Take extra care when cleaning on stairs
18. Store the appliance indoors in a cool, dry area.
19. Use only the charger supplied by the manufacturer to recharge.
20. Do not continuously leave the charger connected to the mains when not in use.



**IMPORTANT:** For dry debris use only.



**WARNING:** Always switch off and remove the battery from the vacuum before assembling, opening or emptying the dirt container.

## Battery Recycling

Your cleaner uses a Lithium-Ion battery. When these batteries no longer recharge, they must be removed from the cleaner and disposed of properly.



**IMPORTANT:** The battery is to be disposed of in one piece. Do not attempt to take apart.

If you would like information on the correct disposal of batteries, we're here to help. Simply call us on AU: 1300 361 505 / NZ: 0800 800 900.

**This cordless handheld vacuum cleaner is intended for household use only and NOT for commercial or industrial use.**

**PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.**

# Operation

## Charge Battery



Charge battery fully before first use. Fully discharged battery will take up to 3 hours to charge.

## Insert Battery



Insert charged battery into battery cavity until latch is locked into place.

NOTE: When inserting and removing battery, ensure the switch is in the off position marked "O".

## ON/OFF Switch



To turn vacuum on, roll switch forward to position marked "I".

## Remove Battery



To remove and charge battery, pull on release lever located on end of battery and pull out gently.

## Attachments



### CREVICE TOOL

Push crevice tool forward to release.



Pivot up crevice tool.



Lock crevice tool into nozzle.



### BRUSH TOOL

Pull brushes forward.

Reverse steps 1-3 to store crevice or brush tool.

# Operation

## Machine: battery charge indicator

All three LEDs will light momentarily when the power switch is turned on. The battery charge indicator will then indicate remaining capacity as below:

3 LEDs lit	Remaining capacity is more than 75%
2 LEDs lit	Remaining capacity is more than 50%
1 LED lit	Remaining capacity is more than 25%
1 LED blinking	Remaining capacity is less than 25%

## Charger: LED operations

LED not lit, battery not in charger	No charging is taking place	Normal condition
LED lit continuously	Battery is charging	Leave battery in charger
LED pulses (gradually dimming and brightening)	Battery is fully charged	Remove battery from charger

## Battery recycling

Your cleaner uses a Lithium-Ion battery. When these batteries no longer recharge, they must be removed from the cleaner and recycled.



**IMPORTANT:** The battery is to be disposed of in one piece. Do not attempt to take apart.

If you would like information on the correct disposal of batteries, we're here to help. Simply call us on AU: 1300 361 505 / NZ: 0800 800 900.

# Maintenance (Keep your Vax as good as new)

## Dirt Cup & Filter Removal & Replacement

**IMPORTANT:** For best results, clean after each use.

**REGULAR MAINTENANCE:** Each time the dirt cup is emptied, the filter should be cleaned (Filter will be discolored after use).

### Removal



Grip dirt cup and twist off in direction indicated on hand vac until unlock symbol is aligned with mark.




Pull pre-screen from dirt cup.



Empty dirt cup over bin to remove debris.




To remove debris from pre-screen, gently tap over bin.

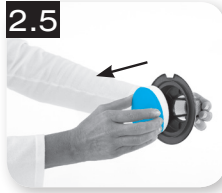

Pull out filter and brush or wash clean with cold water. **WARNING:** Always dry for 24 hours before replacing.

**WARNING: Do not use detergent or hot water to clean.**

### Replacement

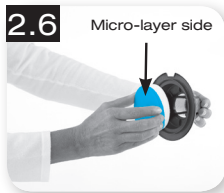

Replace filter in pre-screen with micro-layer side facing out.



Replace filter and pre-screen in dirt cup.



Replace dirt cup by twisting on in direction indicated on hand vac until lock symbol is aligned with mark.

# FAQs (Battery and charger)



**WARNING:** to reduce the risk of personal injury, remove battery pack before performing maintenance/troubleshooting checks.

## Why isn't the LED lit when the battery is inserted into the charger?

- Check that the wall charger is plugged in.
- Check the battery is inserted correctly into the charger (Page 4,5)
- The battery may not be communicating with the charger. Remove battery and unplug charger, wait 10 seconds, then plug charger into socket and re-insert battery.
- For further assistance, please call us on:  
**AU: 1300 361 505 / NZ: 0800 800 900**

## Why does the LED flash twice followed by a 1 second off period?

- The battery might be too hot or cold. Leave the battery in the charger. When the battery reaches the correct temperature, the battery will start charging automatically.

## Why is the LED continually flashing?

- Check the battery is inserted correctly into the charger (Page 4,5)
- The battery or charger may have detected an error. Remove battery and unplug charger, wait 10 seconds, then plug charger into socket and re-insert battery.
- For further assistance, please call us on:  
**AU: 1300 361 505 / NZ: 0800 800 900**

## Why does the LED flash/stay lit after battery is removed?

- This is normal if within 10 seconds of battery removal.
- If it still flashes after 10 seconds, unplug charger, wait 10 seconds, then plug charger into socket.
- For further assistance, please call us on:  
**AU: 1300 361 505 / NZ: 0800 800 900**

# Other Information

## Service & Help

Vax Customer Service line AU: 1300 361 505 / NZ: 0800 800 900

Monday-Friday 8.30am to 5.30pm

If you have any queries about using your Vax, call the Vax Careline. Calls are charged at the standard national rate.

Please make a note of the serial number and model number of the carpet cleaner before calling or visit [www.vax.com.au](http://www.vax.com.au)

## Technical Specification

Battery type:	Lithium-Ion
Battery voltage:	18V (Battery sold seperately and not included in this pack) Part Number BH50000
Capacity:	0.45L
Runtime:	Up to 12 minutes
Weight:	1.9kg
Charger input wattage:	100 - 230V - 50Hz 600mA
Charging time:	3 hours
Filter type:	Washable

Subject to technical change without notice.

Distributed by Techtronic Industries, Australia.  
666 Doncaster Rd,  
Doncaster, Victoria, Australia 3108.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.