



Machine Overview

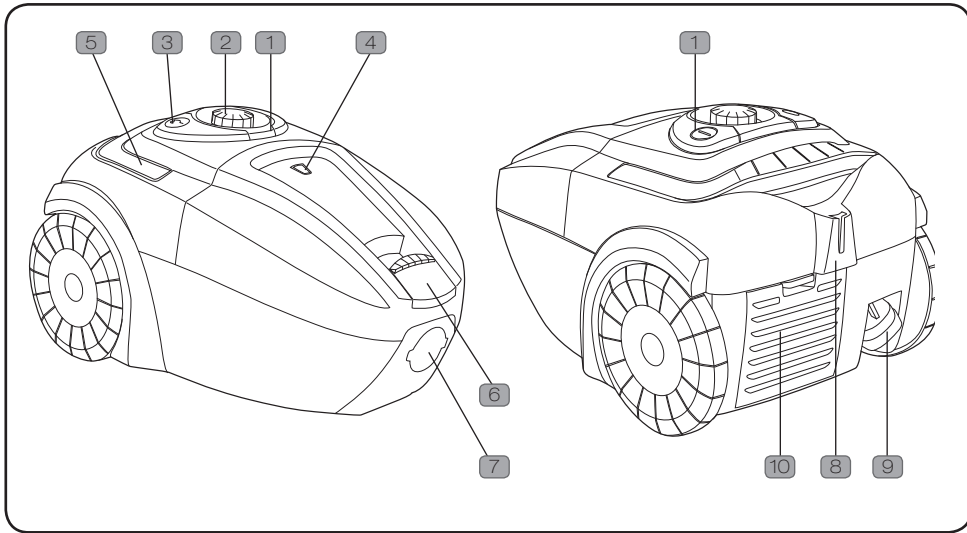

- | | |
|----------------------|----------------------------|
| 1 On/ Off button | 6 Dirt container release |
| 2 Variable power | 7 Hose inlet |
| 3 Cord rewind button | 8 Floor tool parking slot |
| 4 Bag full indicator | 9 Plug |
| 5 Carry Handle | 10 Post motor filter cover |

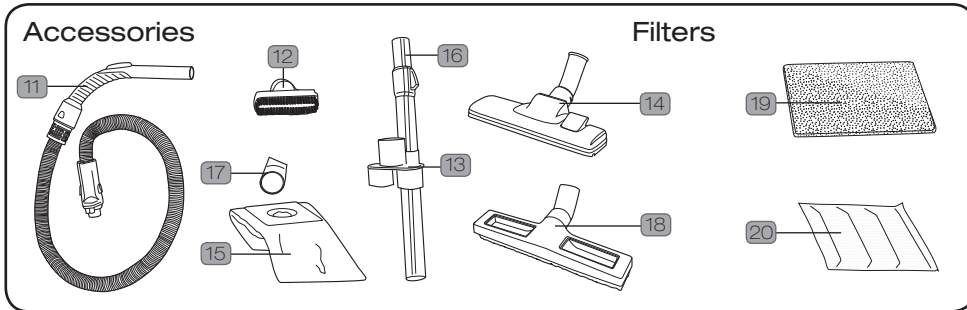

- | | |
|---|---|
| 11 Hose and handle | 16 Telescopic extension wand |
| 12 2-in-1 tool (Upholstery & Dusting Brush) | 17 Crevice tool |
| 13 Tool storage | 18 Parquet floor tool (Hard floor tool) |
| 14 Combination floor head | 19 Pre motor filter |
| 15 HEPA dust bag | 20 Post motor filter |


General Safety Information


FOR HOUSEHOLD USE ONLY.


When using the vacuum cleaner, basic safety precautions should always be observed, including the following:

1. Only use the vacuum cleaner indoors on dry surfaces.
2. Turn off the vacuum cleaner controls before disconnecting or connecting from the mains supply.
3. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories.
4. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Use only as described in this manual. Use only Vax recommended attachments.
7. Do not use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not use the vacuum cleaner with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Do not pull or carry by cord. Do not use the cord as a handle, close a door on the cord or pull cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
9. Do not handle the plug or vacuum cleaner with wet hands. Do not use outdoors or on wet surfaces.
10. Do not put any objects into openings. Do not use with any openings blocked and do not restrict airflow. Keep all openings free of dust, lint, hair or anything that might reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not pick up hot coals, cigarette butts, matches or any hot, smoking or burning objects.
13. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use in the presence of explosive liquids or vapours.
14. Do not vacuum up harmful or toxic material (chlorine, bleach, ammonia, drain cleaner etc.).
15. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.
16. Do not use without ALL of the filters in place.
17. Take extra care when vacuuming on stairs.
18. Keep vacuuming area well lit.


19. Store the vacuum cleaner in a cool, dry area.
20. Turn off the on/off switch before unplugging the vacuum cleaner
21. Use only SAA approved 10 amp extension cords. Non-approved cords may overheat. Care should be taken to arrange the cord so that the cord cannot be tripped over.
22. Damaged cord to be replaced by manufacturer or authorised Vax service agent.
23. We recommend the use of a residual current device with a residual current rating of 30mA or less.

 **WARNING:** Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.

 **CAUTION:** The vacuum cleaner is a very powerful unit. Before plugging the cord into the electrical outlet, make sure the switch is in the 'off' position. Hold the vacuum cleaner firmly when starting and in use.

 **IMPORTANT:** If the inlet, hose or telescopic tube is blocked, switch off the vacuum cleaner and remove the blockage(s) before re-starting the vacuum cleaner.

 **IMPORTANT:** Cleaning filters improves vacuum performance. Vax recommends that your filters should be checked and cleaned periodically. If your filters are washable make sure they are completely dry before inserting back into the vacuum cleaner.

 
 **IMPORTANT:** The motor is equipped with a thermal cut-out. If for any reason the unit should overheat, the thermostat will automatically turn the unit off. Should this occur, unplug the vacuum cleaner from the electrical outlet and turn off the switch. Remove dirt container and empty. Clean filters. Allow the unit to cool for approximately one hour. To re-start, plug into an electrical outlet and switch back on.

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.

Operation


Keep your Vax like new






! IMPORTANT: The condition of the filters affects the performance of your machine. Please check and clean filters periodically (depending on the level of use). For full cleaning instructions, see Maintenance.

! IMPORTANT: Do not use the vacuum cleaner without all of the filters in place.

Assembling your vacuum cleaner

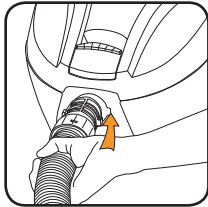


NOTE: The combination floor head, crevice tool, 2-in-1 tool and parquet floor tool can all be attached to the telescopic tube or hose handle.

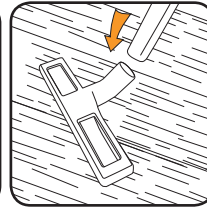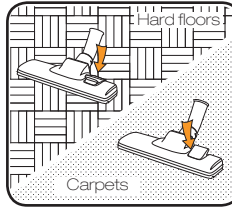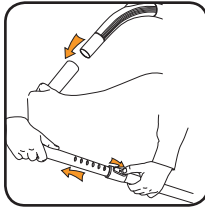


This tool is for safely cleaning parquet, laminate, wood and tiled floors.

Operating the appliance

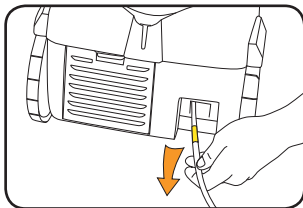


NOTE: Fully extend the power cord before every use. A yellow mark on the cord indicates the recommended cord length. Do not exceed the cord length beyond the yellow mark.

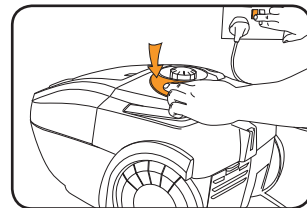


Cord rewind button.


Packing away and storage

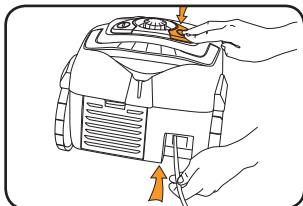

Retract cord by pressing the cord rewind button

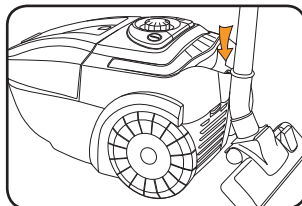


Storage position.

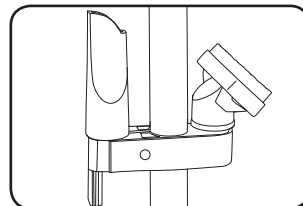


On-board tools.

Maintenance


Emptying and cleaning the dirt container

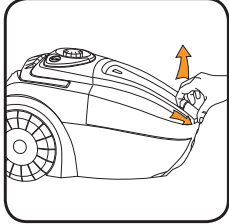

Lift container lid.

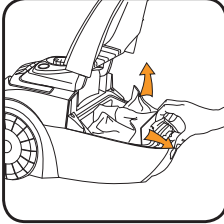





Slide out bag.

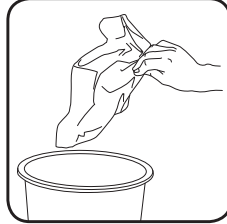

Throw bag in rubbish.

Cleaning the pre-motor filter


 **IMPORTANT:** Water temperature should be at a maximum of 40° C when washing filters

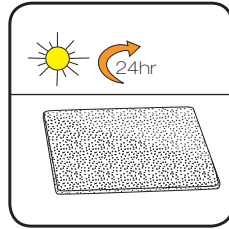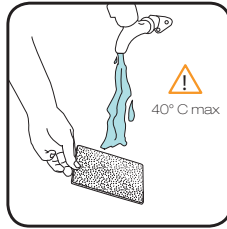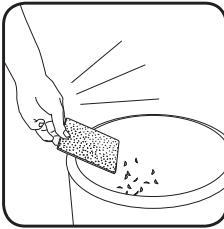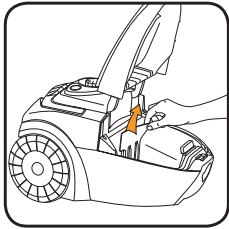

Allow 24 hrs to dry.

Cleaning the post-motor filter

 **IMPORTANT:** Do not wash the post-motor filter. Tap against the dust bin.

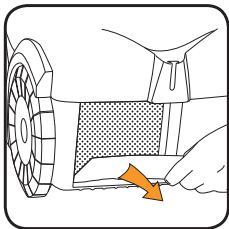

Maintenance

Clearing blockages



WARNING: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/troubleshooting checks! .

Hose blockages

The flexible hose should be disconnected from the vacuum cleaner.
Carefully remove any blockages found and reconnect the hose securely.

Accessory blockages

Remove accessory from the hose/handle tube.
Carefully remove the blockage and return to the cleaner.

FAQs



WARNING: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/ troubleshooting checks.

Is there an accessory missing?

- Check the "Parts Overview" page in this guide to make sure the part is definitely included in your unit.

Why won't the vacuum cleaner pick up?

- The filter may be clogged; refer to Maintenance section.
- The dust bag is full or blocked; refer to Maintenance section.
- The dust bag may be incorrectly installed; refer to Maintenance section.

Why is there dust escaping from the vacuum?

- The filters may not be installed correctly; refer to Maintenance section.
- The dust bag may be incorrectly installed; remove the dust bag from the unit by pressing the dirt container removal and then re-attaching it to the unit, ensuring it is locked firmly back into place.
- The filters may be clogged; refer to Maintenance section.

Why won't the accessories pick up properly?

- The accessory may be blocked; refer to Maintenance section.

Why will the vacuum cleaner not run?

- It may not be plugged into the electrical outlet correctly; ensure that the plug is pushed in securely.
- The electrical outlet may not be working properly; check the fuse or breaker, or consult an electrician.
- The motor thermostat may have tripped; switch off and unplug the vacuum cleaner, and leave for one hour before switching the cleaner back on.



we  to help

Don't take your machine back to the shop, simply contact us

www.vax.com.au

AU: 1300 361 505
NZ: 0800 800 900

Other Information

Vax Service & Help

Vax Customer Careline AU: 1300 361 505 / NZ: 0800 800 900

Monday - Friday 8.30am to 5.30pm

Any queries or concerns about using the Vax, call the Vax Careline. Calls are charged at the Standard national rate.

Please make a note of the serial number and model number of the carpet cleaner before calling. For the nearest Service Agent, please call the Vax Customer Careline or visit www.vax.com.au

Technical Specification

Voltage:	220-240V ~50Hz
Wattage:	2000W
Capacity:	5L
Filters:	Pre-motor: Washable Microfresh filter Post-motor: Washable, Fabric filter Bag Type: HEPA grade paper bag
Cord Length:	5m
Weight:	5kg

Subject to technical change without notice.



Double Insulated



Indoor Use



Read Instructions



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Notes

Notes

10

Vax Service line
AU: 1300 361 505 / NZ: 0800 800 900

Notes





we  clean

Distributed by Techtronic Industries Ptd. Ltd.
Level 1. 666 Doncaster Rd, Doncaster, Australia 3108.
www.vax.com.au Service Line: AU: 1300 361 505 / NZ: 0800 800 900