




we  clean

User Guide

Vax Service line AU: 1300 361 505
NZ: 0800 800 900

Bagless Cylinder

 POWER2

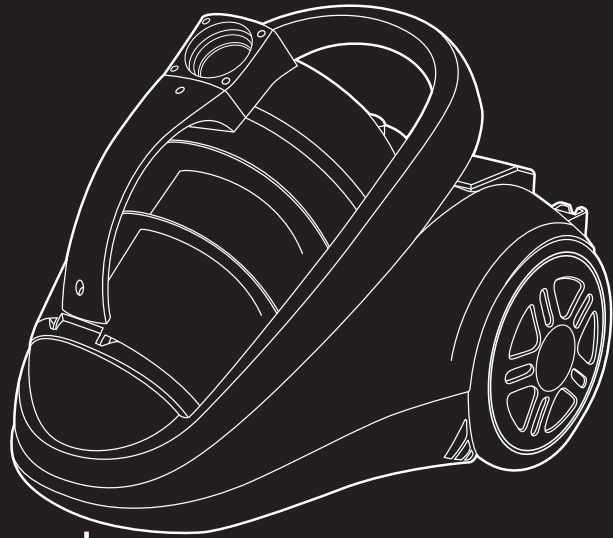

Get Cleaning...

What's your Vax's model number?

V P 2 2 0 0

V P 2 2 0 0 P

What's your serial number? (Located on the base of the machine)


- - - -

Note these down in case you need them in future. Please keep instructions for further use.

www.vax.com.au


VP2200/ VP2200P

Machine Overview

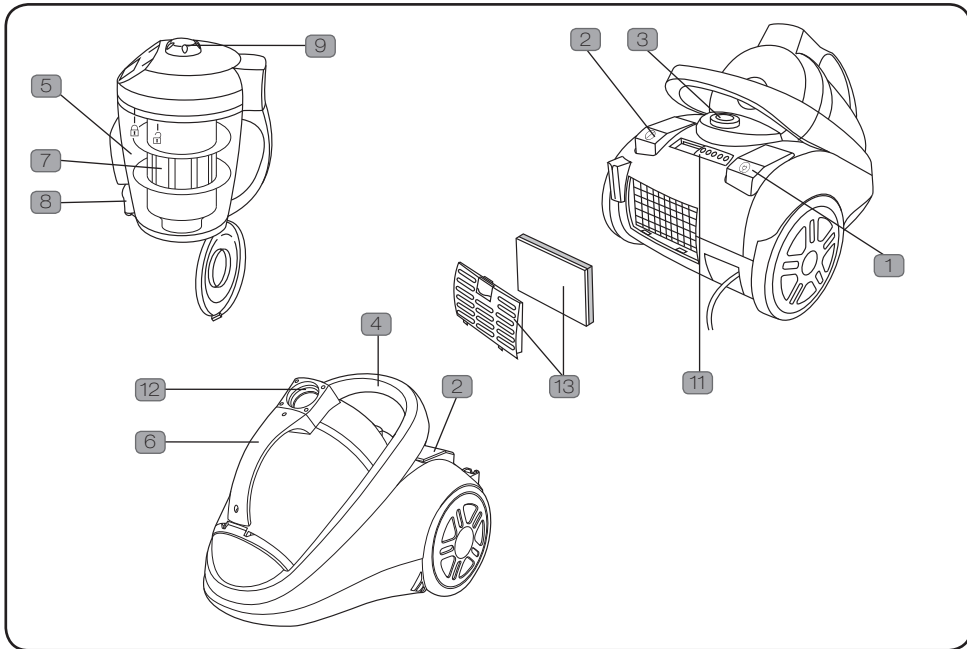

- | | | |
|----------------------|--------------------------|-------------------------|
| 1 Cord rewind | 6 Canister handle | 11 Main suction control |
| 2 On/ Off button | 7 Mesh Filter | 12 Hose inlet |
| 3 Bin release button | 8 Canister latch release | 13 Outlet filter |
| 4 Carry handle | 9 Filter agitator | |
| 5 Dust container | 10 Hose lock | |

Accessories

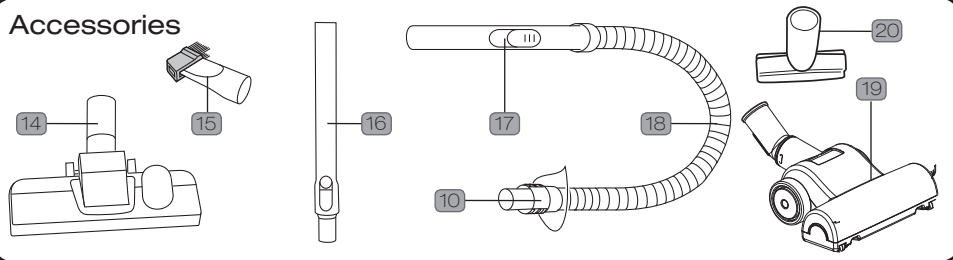

- | | | |
|------------------------------|------------------------------------|--------------------|
| 14 Combination head | 17 Wand suction control | 20 Upholstery tool |
| 15 Crevice tool & dust brush | 18 Hose | |
| 16 Telescopic wand | 19 Turbo tool (VP2200P model only) | |


General Safety Information


FOR HOUSEHOLD USE ONLY.


When using the vacuum cleaner, basic safety precautions should always be observed, including the following:


1. Only use the vacuum cleaner indoors on dry surfaces.
2. Turn off the vacuum cleaner controls before disconnecting or connecting from the mains supply.
3. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories.
4. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Use only as described in this manual. Use only Vax recommended attachments.
7. Do not use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not use the vacuum cleaner with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Do not pull or carry by cord. Do not use the cord as a handle, close a door on the cord or pull cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
9. Do not handle the plug or vacuum cleaner with wet hands. Do not use outdoors or on wet surfaces.
10. Do not put any objects into openings. Do not use with any openings blocked and do not restrict airflow. Keep all openings free of dust, lint, hair or anything that might reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not pick up hot coals, cigarette butts, matches or any hot, smoking or burning objects.
13. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use in the presence of explosive liquids or vapours.
14. Do not vacuum up harmful or toxic material (chlorine, bleach, ammonia, drain cleaner etc.).
15. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.
16. Do not use without ALL of the filters in place.
17. Take extra care when vacuuming on stairs.
18. Keep vacuuming area well lit.

19. Store the vacuum cleaner in a cool, dry area.
20. Turn off the on/off switch before unplugging the vacuum cleaner
21. Use only SAA approved 10 amp extension cords. Non-approved cords may overheat. Care should be taken to arrange the cord so that the cord cannot be tripped over.
22. Damaged cord to be replaced by manufacturer or authorised Vax service agent.
23. We recommend the use of a residual current device with a residual current rating of 30mA or less.

 **WARNING:** Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.

 **CAUTION:** The vacuum cleaner is a very powerful unit. Before plugging the cord into the electrical outlet, make sure the switch is in the 'off' position. Hold the vacuum cleaner firmly when starting and in use.

 **IMPORTANT:** If the inlet, hose or telescopic tube is blocked, switch off the vacuum cleaner and remove the blockage(s) before re-starting the vacuum cleaner.

 **IMPORTANT:** Cleaning filters improves vacuum performance. Vax recommends that your filters should be checked and cleaned periodically. If your filters are washable make sure they are completely dry before inserting back into the vacuum cleaner.

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.

Soft Start

IMPORTANT: This model is fitted with a soft-start system. When the unit is switched on, the motor will take a few seconds to build up to full power. The purpose of this function is to offer better protection to the vacuum motor.

Operation

Fitting the hose

Push the hose end into the inlet. Inlet will 'click' when locked into position.

Check inlet is properly fitted by gently pulling on hose.

Cable

Fully extend the power cord before each use. A yellow mark on the cord indicates the recommended cord length. Do not exceed the cord length beyond the yellow mark.

Carrying and moving the cleaner

Lift the cleaner only by the carrying handle.
Do not sit the vacuum upright.



Powering the vacuum

- Plug the cable into a power socket, flick switch 'On.'
- Press and release the 'On/ Off button' to turn the cleaner on.
- When you have finished, press and release the 'ON/ Off button' to turn the cleaner off.

Choose the tool for the job

Accessories will fit on the nozzle, or on the end of the telescopic wand. The telescopic wand fits on the end of the nozzle.

Combination tool:

- Used for hard floors and carpets.
- Press the rear of the brush pedal to extend the bristles, for hard floor coverings, eg vinyl, parquet, anything without pile.
- Press the front of the brush pedal to retract the bristles, for soft floor coverings, like rugs, carpets and anything with pile.

Crevice tool:

- As the name implies, down the side of upholstery and in hard to reach places.

Turbo tool:

- Use the Turbo tool to remove pet hair, lint and dust from blinds, curtains and upholstery.

Telescopic wand

- Fit the extendable tube to the nozzle for floors, carpets, or hard to reach places.
- Push the tube release towards the narrow end of the tube, and keep it pressed until extended.
- Return the tube release to the locked position
- Push the wide end of the extendable tube on to the nozzle.
- Choose a tool, and push it onto the narrow end of the tube.

Suction control

- The main suction control is above the wheels.
- Move it towards the cable rewind button to increase suction, move it towards the on/off switch to decrease suction.
- Suction control on the nozzle – move it towards the nozzle for maximum suction, move it away from the nozzle to reduce suction

Maintenance

Removing and emptying dust container

- Switch off and unplug from the power supply.
- Squeeze the locks on the hose end, and pull the hose out of the bin.
- Press the bin release button, and hold it down.
- Grip the bin handle, and pull the bin up and out of the cleaner.
- Press the latch, to open the bottom of the bin, and tap its contents into the dustbin.
- Turn the agitator on top of the bin twice clockwise, then twice anti-clockwise.
- Lift the bottom of the bin up to close it.

Check the filters


- While emptying the bin, check the filters – blocked filters can reduce suction.
- Look through side of bin to view mesh filter. The HEPA filter is visible through the mesh filter.
- If dirty, clean filters; See 'Cleaning Filters'.
- Replace the bin in the cleaner. A 'click' will sound when bin is positioned correctly.

Cleaning the vacuum


- Switch the cleaner off and unplug before cleaning.
- Do not put any part of the cleaner in a dishwasher.
- Do not use harsh or abrasive cleaning agents or solvents.
- Wipe external surfaces with a damp cloth. A small amount of washing-up liquid will remove any stubborn stain, but clean it off afterwards, or it may stain.
- Wipe the tools with a damp cloth, or hand wash in warm soapy water. Rinse to remove any trace of soap, and air dry before using.
- Wipe the telescopic wand and hose with a damp cloth. Do not submerge in water.
- Wash the bin in warm soapy water. Use only a soft cloth or sponge. Rinse to remove all traces of soap and air dry. Do not replace until completely dry. (Allow 24 hrs)

Cleaning the filters


Firmly hold the bin handle with one hand, hold the inlet with the other, and twist counter-clockwise.

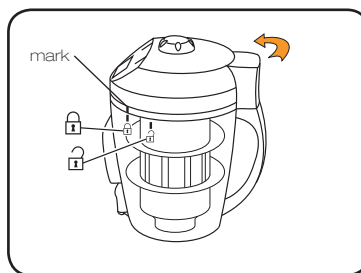

Lift the lid and filter assembly out of the dust bin, turn them upside down.

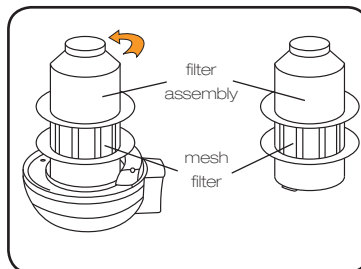

Turn the filter assembly clockwise, to unlock it, lift off to expose the HEPA filter.

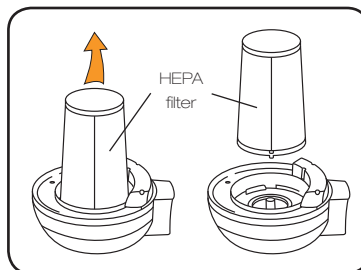

Lift the HEPA filter up and out of the lid.

Maintenance

The mesh filter


- Wash the filter assembly and mesh filter in warm soapy water.
- Leave it to air dry – don't refit it till it's completely dry. (Allow 24 hrs)

The HEPA filter


- Unscrew the top of the filter unit from the HEPA filter.
- If the filter looks dirty, tap it to dislodge the dirt.
- If the filter is very dirty, soak it in warm soapy water for a few minutes, rinse under a running tap, to remove all trace of soap, then let it air dry – do not refit until it is completely dry. Allow 24 hours to dry.

Reassembly

- Wait until all pieces are completely dry before reassembly. Allow 24 hours to dry.
- Lower the HEPA filter into the lid. Turn the filter slightly to fit the spindle into the lid, then turn it a bit more to clear the lugs inside the lid.
- Lower the filter assembly over the HEPA filter, turn anti-clockwise to lock it into the lid.

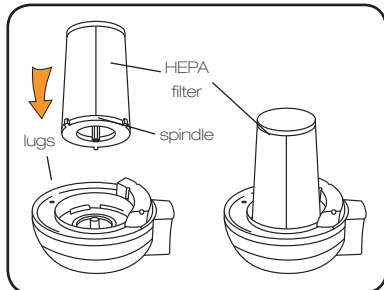


Turn the combined lid and filter assembly upside down.

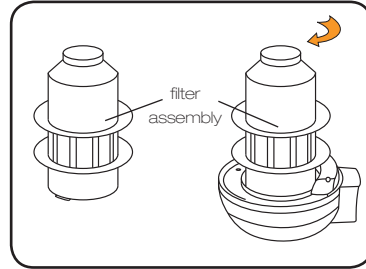

Align the mark on the lid with the mark on the dust bin.

Lower the lid and filter assembly into the dust bin.

Firmly hold the dust bin handle with one hand, hold the inlet with the other, and twist clockwise.

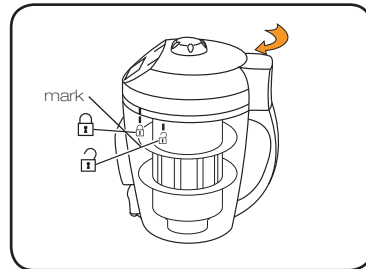


Replace the dust bin in the cleaner - put the bottom in first, then push the top. A 'click' will sound when the bin is locked in the correct position.

Maintenance


Check the outlet filter

- The outlet filter is located at the back of the cleaner.
- If the filter looks dirty, tap it to dislodge the dirt.
- If the filter is very dirty, soak it in warm soapy water for a few minutes, rinse under a running tap, to remove all traces of soap, then let it air dry – do not refit until it is completely dry. Allow 24 hours to dry.
- When it's dry, replace it in the rear of the cleaner.
- The soft foam side of the filter should be towards the cleaner, the firm, white side of the filter should be towards the cover.
- Fit the lugs in the bottom of the cover into the slots in the cleaner, and push the top of the cover into the cleaner it will click into place.

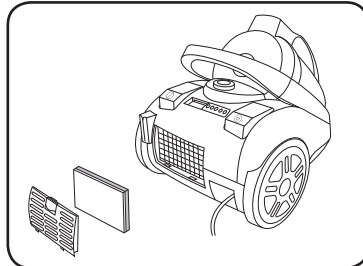

Blockages

- Switch the cleaner off and unplug it.
- If you are using an accessory, remove and check it first.
- Threads and hair may block the turbo tool. (VP2200P Model Only)
 - a) open the turbo tool
 - b) clear any blockage from the turbo by cutting any hair/debris with a pair of scissors.
 - c) close turbo tool.
- Pull the hose out and check it.
- Remove the bin lid, filter assembly and filter, then check both ends of the inlet.
- If there is a blockage use a blunt object to dislodge it. Do not use anything sharp.
- Check all the filters. See Pg 5-6.

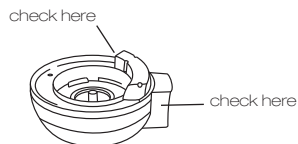

If you require any assistance, please call the Vax Careline on:
AU: 1300 361 505
NZ: 0800 800 900

FAQs



WARNING: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/ troubleshooting checks.

Is there an accessory missing?

- Check the 'Parts Overview' page in this guide to make sure the part is definitely included in your unit.
- If it is missing, we're here to help. Simply call us on AU: 1300 361 505/NZ: 0800 800 900

Why won't the vacuum cleaner pickup?

- The dirt container may be incorrectly installed; remove the dirt container from the unit by pressing the dirt container release button and then re-attaching it to the unit, ensuring it is locked firmly back in to place.
- The filter may be clogged; refer to 'Maintenance: Cleaning the filters' on page 5.
- The dirt container may be blocked; refer to 'Maintenance: Emptying and cleaning the dirt container' on page 5.

Why is dust escaping from the vacuum?

- The filter may be clogged; refer to 'Maintenance: Cleaning the filters' on page 5.
- The dirt container may be blocked; refer to 'Maintenance: Emptying and cleaning the dirt container' on page 5.
- The dirt container may be incorrectly installed; remove the dirt container from the unit by pressing the dirt container release button and then re-attaching it to the unit, ensuring it is locked firmly back in to place.

What do I do if the unit or an accessory becomes damaged or broken?

- We're here to help. Simply call
AU: 1300 361 505 / NZ: 0800 800 900
or visit www.vax.com.au

Why won't the accessories pick up properly?

Hose blockages: remove the flexible hose from the unit. Carefully remove any blockages found and reconnect hose securely.

Accessory blockages: remove accessory from handle/ tube. Carefully remove blockage and re-attach to the vacuum cleaner.

- The accessory may be faulty. Simply call us on
AU: 1300 361 505 / NZ: 0800 800 900 for assistance.

Why will the vacuum cleaner not run?

- It may not be plugged in to the electrical outlet correctly; ensure that the plug is pushed in securely.
- The electrical outlet may not be working properly; check the fuse or breaker, or consult an electrician.
- The motor thermostat may have tripped; switch off and unplug the vacuum cleaner, and leave for one hour before switching the cleaner back on.



we  to help

Don't take your machine back to the shop, simply contact us

www.vax.com.au

AU: 1300 361 505
NZ: 0800 800 900

Other Information

Vax Service & Help

Vax Customer Careline AU: 1300 361 505 / NZ: 0800 800 900

Monday - Friday 8.30am to 5.30pm

Any queries or concerns about using the Vax, call the Vax Careline. Calls are charged at the Standard national rate.

Please make a note of the serial number and model number of the carpet cleaner before calling. For the nearest Service Agent, please call the Vax Customer Careline or visit www.vax.com.au

Technical Specification

Voltage:	220-240V ~50Hz
Wattage:	2200W
Air Watts:	300AW
Capacity:	3L
Filters:	VP2200: Central filter: Washable HEPA Post-motor: Washable, Foam filter
	VP2200P: Pre-motor: Washable Anti-bacterial HEPA Central filter: Washable HEPA filter Post-motor: Washable, Foam filter
Cord Length:	6m
Weight:	VP2200: 6.3kg VP2200P: 6.5kg

Subject to technical change without notice.



 
Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Notes

10

Vax Service line
AU: 1300 361 505 / NZ: 0800 800 900

Notes





we  clean

Distributed by Techtronic Industries Ptd. Ltd.
Level 1. 666 Doncaster Rd, Doncaster, Australia 3108.
www.vax.com.au Service Line: AU: 1300 361 505 / NZ: 0800 800 900