

VAXCARE

Please register your warranty. Send in your completed Warranty Card.

If you require any further assistance or advice about any

VAX please call VAXCARE on

1300 36 4040 (Australia - cost of a local call)

and **0800 800 900** (NZ)



VAX Appliances (Australia) Pty Ltd
A.C.N. 009099736

296 Victoria Road Malaga Western Australia 6090.

EMAIL: vaxcare@vax.com.au

WEBSITE: www.vax.com.au

vax AUST. & NZ BRANCHES

• NSW/ACT

Unit 2, 30 Heathcote Road,
Moorebank, NSW 2170
Telephone: (02) 9602 6800
Facsimile: (02) 9602 6900

• VICTORIA/TASMANIA

Unit 3, 46 Burgess Road,
Bayswater North, VIC 3153
Telephone: (03) 9761 7160
Facsimile: (03) 9761 7175

• SOUTH AUSTRALIA/ NORTHERN TERRITORY

Unit 3, 75-77 Grange Road,
Welland, SA 5007
Telephone: (08) 8340 2222
Facsimile: (08) 8346 7933

• QUEENSLAND

186 Kerry Road,
Archerfield, QLD 4108
Telephone: (07) 3216 7350
Facsimile: (07) 3216 7375

• WESTERN AUSTRALIA

296 Victoria Road,
Malaga, WA 6090
Telephone: (08) 9247 8100
Facsimile: (08) 9247 8192

• VAX APPLIANCES NEW ZEALAND

27 Clemow Drive
Mt Wellington, Auckland
Telephone: (09) 5736220
Facsimile: (09) 5736224
Email: vaxnz@vax.co.nz

 


www.vax.com.au

Vaxcare:

AUST: 1300 36 4040

NZ: 0800 800 900

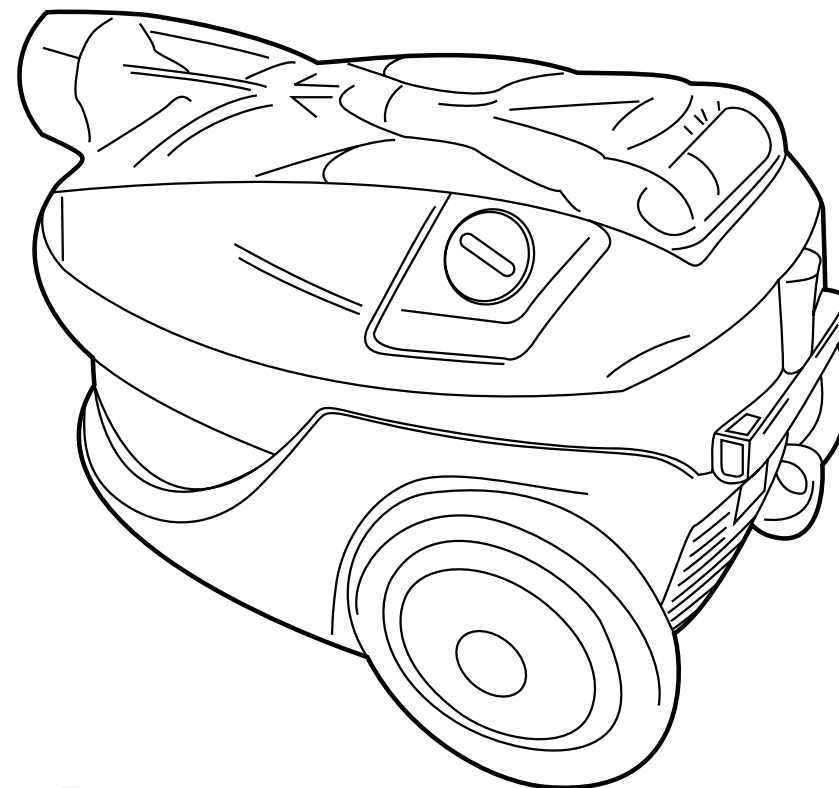

ultrixx

BAGLESS CYLINDER VACUUM CLEANER

Vax Model Numbers: V-096/V-096TT/V-096TB/V-096X

Instruction Manual

Please read carefully before using the cleaner.
Always fully extend the mains cable before use.

Safety Information

FOR HOUSEHOLD USE ONLY

When using the vacuum cleaner, basic safety precautions should always be observed, including the following:

1. Only use the vacuum cleaner indoors on dry surfaces.
2. Turn off the vacuum cleaner controls before connecting or disconnecting from the mains supply.
3. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories.
4. This appliance is not intended for use by young or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
Young children should be supervised to ensure that they do not play with the appliance.
5. Use only as described in this manual. Use only the manufacturer's recommended attachments.
6. Do not use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not use the vacuum cleaner with a damaged cord or plug. If the supply cord or plug is damaged, return the vacuum cleaner to a Vax Authorised Service Agent or suitably qualified person for examination, repair or adjustment.
7. Do not pull or carry by the cord. Do not use the cord as a handle, close a door on the cord or pull the cord around sharp edges or corners.
Do not run the vacuum cleaner over the cord.
Keep the cord away from heated surfaces.
8. Do not handle the plug or vacuum cleaner with wet hands. Do not use outdoors or on wet surfaces.
9. Do not put any objects into openings. Do not use with any openings blocked and do not restrict air flow. Keep all openings free of dust, lint, hair or anything that may reduce airflow.
10. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
11. Do not pick up hot coals, cigarette butts, matches or any hot, smoking or burning objects.

12. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc) or use in the presence of explosive liquids or vapours.
13. Do not vacuum up harmful or toxic material (chlorine bleach, ammonia, drain cleaner, etc).
14. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.
15. Do not use without the filters in place.
16. Take extra care when vacuuming on stairs.
17. Keep vacuuming area well lit.
18. Store the vacuum cleaner indoors in a cool, dry area.
19. Turn off the on/off switch before unplugging the vacuum cleaner.

WARNING: Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.

CAUTION: The vacuum cleaner is a very powerful unit. Before plugging the cord into the electrical outlet, make sure the switch is in the 'off' position.
Hold the vacuum cleaner firmly when starting and in use.

IMPORTANT: If the inlet, hose or telescopic tube is blocked, switch off the vacuum cleaner to remove the blockage(s).

IMPORTANT: Washing filters improves vacuum performance. Make sure all the filters are completely dry before inserting back into the vacuum cleaner.

This vacuum cleaner is intended for household use only and not for commercial or industrial use.

Motor Thermostat

IMPORTANT: The motor is equipped with a thermal cut-out. If for any reason, the vacuum cleaner should over-heat, the thermostat will automatically turn the unit off. Should this occur, unplug the vacuum cleaner from the electrical outlet and turn the unit off. Remove the dirt container and empty. Clean the filters. Allow the cleaner to cool for approximately one (1) hour before re-starting

8. Troubleshooting

WARNING: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/troubleshooting checks.

PROBLEM: Vacuum cleaner won't run

Cause: Not properly plugged into electrical outlet.

Solution: Plug in securely.

Cause: No electricity in the electrical outlet.

Solution: Check fuse or breaker.

Cause: On/off switch not turned on.

Solution: Push on/off switch to 'on'.

Cause: Motor thermostat has tripped.

Solution: Switch off and unplug the vacuum cleaner. Leave for one (1) hour before switching the vacuum cleaner back on.

Cause: Blown fuse/tripped breaker.

Solution: Reset circuit breaker or replace fuse.

PROBLEM: Cleaner won't pick up/loss of suction.

Cause: Dirt container not installed properly.

Solution: Review dirt container replacement.

Cause: Dirt container full or blocked.

Solution: Empty dirt container.

Cause: Clogged filters.

Solution: Remove, clean and replace filters.

PROBLEM: Dust escaping from the vacuum cleaner.

Cause: Dirt container full.

Solution: Empty dirt container.

Cause: Dirt container not installed.

Solution: Review dirt container replacement.

Cause: Hose/X-tend (Model: V-096X only) not installed correctly.

Solution: Review installation.

Cause: Central filter not installed completely.

Solution: Remove, clean and replace filter.

PROBLEM: Accessories won't pick up.

Cause: Accessories are not attached correctly.

Solution: Refer to accessories section.

9. Storage

IMPORTANT: Always unplug the vacuum cleaner from the electrical outlet and rewind the power cord as directed before storing.

NOTE: Always store the vacuum cleaner base down.

Technical Specification

Voltage:	220-240V~50Hz
Wattage:	2000W (dependant on model)
Capacity:	2 litres approx
Filters:	Washable central HEPA filter Pre-motor filter Post-motor filter
Cord length:	5.6m (approx)
Weight:	7.3kg
Part Number:	13000 - Ultrixx TT 14000 - Ultrixx X

Subject to technical change without notice.

VAXCARE Service & Help: AUSTRALIA 1300 36 4040 NEW ZEALAND 0800 800 900

Any queries or concerns about using the Vax, call VAXCARE.

Please make a note of the serial number and model number of the appliance before calling.

(Aust only: Mon-Fri. 10.00am to 6.00pm. EST)

Calls are charged at the local rate.

An answerphone is available out of these hours.

There are over 300 approved Vax Service Agents in Australia and New Zealand. For the nearest Service Agent, please refer to your Vax warranty or call VAXCARE or visit www.vax.com.au

Dirt Container & Filters cont...

Cleaning the Filter

1. Pull out the central filter (Fig.6/3).

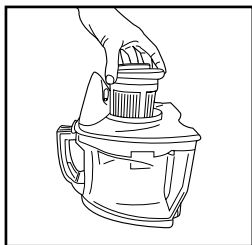 


Fig.6/3

2. Gently tap the filter against the side of a rubbish bin to remove excess dirt.

NOTE: Twist the centre dial on the filter to aid cleaning.

3. The central filter can be washed in warm water (max 40°C). Allow to air dry completely before replacing.

NOTE: Do NOT use any detergents or boiling water to wash the filter. Wash the filter every time you empty the dust container.

4. Return the central filter to the unit.
5. Replace the dirt container.

Pre-motor Filter

NOTE: This is located under the top cover.

1. Release the pre-motor filter cover by pulling on the tab.
2. The pre-motor filter can be washed in warm water (max 40°C). Allow to air dry for 24 hours before replacing.

NOTE: Do NOT use any detergents or boiling water to wash the filter. Wash the filter every 9-12 months.

3. Replace the pre-motor filter and cover before re-starting the vacuum cleaner.

Post-motor Filter

NOTE: This is located on the rear of the vacuum cleaner.

1. Release the post-motor filter cover and remove the filter by pressing in the catch on the top of the filter cover.
2. The post-motor filter can be washed in warm water (max 40°C). Allow to air dry for 24 hours before replacing.

NOTE: Do NOT use any detergents or boiling water to wash the filter. Wash the filter every 9-12 months.

3. Replace the post-motor filter and cover before re-starting the vacuum cleaner.

7. Cleaning Blockages

WARNING: To reduce the risk of injury, the power cord must be disconnected before performing maintenance/troubleshooting checks.

1. Turn the vacuum cleaner off and unplug from the electrical outlet.
2. The flexible hose and X-tend (Model: V-096X only) can be disconnected from the vacuum cleaner by pushing the button on the hose and pulling away from the machine. Remove any blockages found then reconnect the hose securely.

3. **Removing debris from the Mini TurboTool** (Model: V-096TT/V-096TB/V-096X only)
Switch the vacuum cleaner off and disconnect the power plug from the electrical outlet. Rotate the locking ring 180° (Fig.7/1).

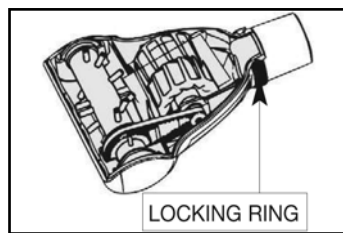 


Fig.7/1

Lift the top cover off and remove any debris (Fig.7/2).

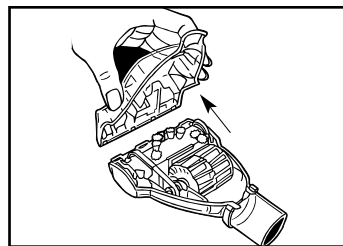 


Fig.7/2

To re-assemble, ensure that the tabs are engage. Pivot the lower housing closed and rotate the locking ring 180° (Fig.7/3).

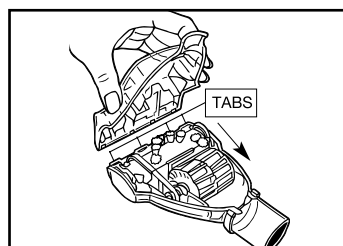 


Fig.7/3

1. Parts Overview

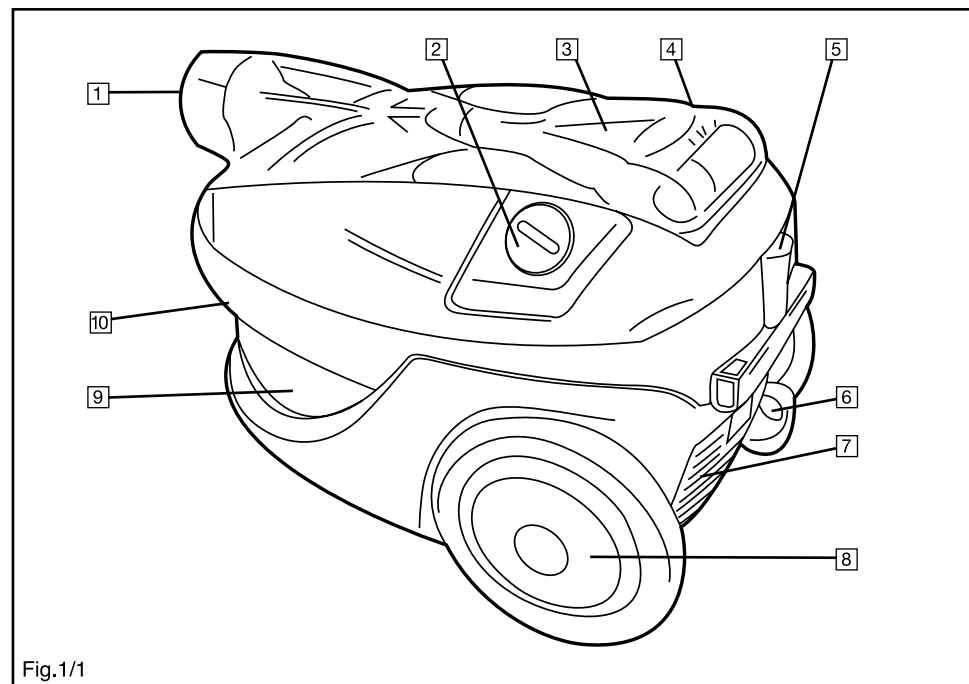 


Fig.1/1

1. Hose inlet
2. On/off button
3. Mini TurboTool (Model: V-096TT/V-096TB/V-096X only)
4. Auto cord rewind
5. Floor tool parking slot
6. Plug
7. Post-motor filter
8. Wheel
9. Dust container
10. Carry handle

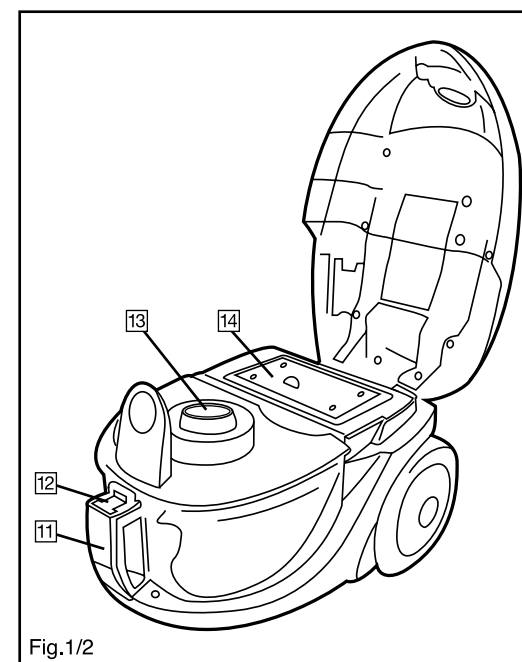 


Fig.1/2

2. Parts Overview - Accessories

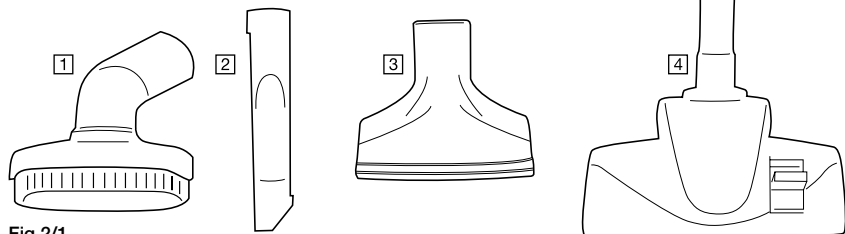 


Fig.2/1

1. Dusting brush 2. Crevice tool 3. Upholstery tool 4. Combination floor head (Model: V-096/V-096TT/V-096TB only)

TurboBrush

(Model: V-096TB/V-096X only)

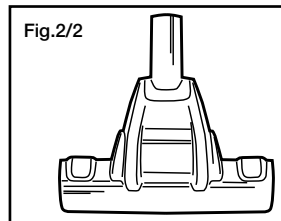 


Fig.2/2

Mini TurboTool

(Model: V-096TT/V-096TB/V-096X only)

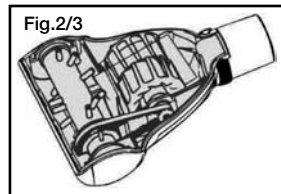 


Fig.2/3

X-tend

(Model: V-096X only)

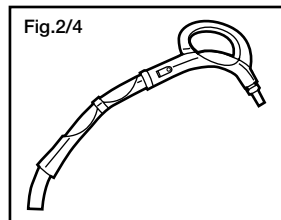 


Fig.2/4

Hard Floor Tool

(Model: V-096X only)

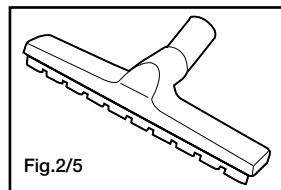 


Fig.2/5

3. How to Assemble

IMPORTANT: Always unplug the vacuum cleaner from the electrical outlet before assembling or removing the accessories.

1. Insert the flexible hose into the inlet on the main body of the vacuum cleaner. Push in until it clicks into position (Fig.3/1).

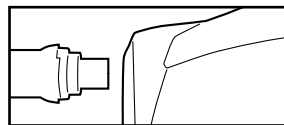 


Fig.3/1

2. Push the telescopic extension tube on to the end of the handle (Fig.3/2).

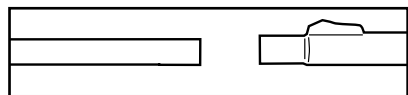 


Fig.3/2

3. The telescopic extension tube can be lengthened or shortened by pushing the button in and sliding the tube apart or together as required (Fig.3/3).

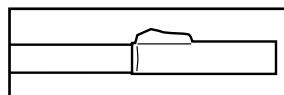 


Fig.3/3

4. Fit the combination floor head by pushing onto the extension tube (Fig.3/4).

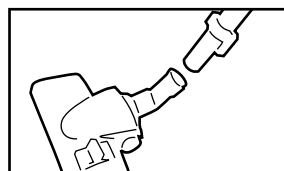 


Fig.3/4

4. How to Operate

Cord Release

Fully unwind the power cord. A yellow mark on the power cord indicates the recommended cord length. Do not extend the cord beyond this mark.

On/off Button

1. Insert the power plug into the electrical outlet. Make sure the vacuum cleaner is switched off.
2. Press the on/off switch located on the top of the vacuum cleaner, to switch on the vacuum cleaner and press the button again to turn the vacuum cleaner off.

Carpet Cleaning (Except Model: V-096X)

For carpet and rug cleaning, press the rocker switch on the combination floor head to raise the brushes.

Hard Floor Cleaning (Except Model: V-096X)

For hard floor cleaning, press the rocker switch on the combination floor head to lower the brushes.

Cord Rewind

To rewind the power cord, press the cord rewind button, located on the top of the vacuum cleaner. Guide the power cord with one hand. Rewind approx 1-1/2 metres of cord at a time. This will prevent the cord from whipping which could cause damage or injury.

Carry Handle

Use the carry handle at the front end of the vacuum cleaner to move from room to room.

Hose Storage

There is a slot located on the rear and base of the vacuum cleaner where the floor tool and hose can be parked for carrying and storage.

5. Accessories

1. By removing the telescopic tubes, the accessories can be attached directly to the handle.
2. The accessories can be attached to the telescopic extension tube for extra reach. Remove the combination floor head and push on the desired accessory.

Crevice tool: for crevices, corners, window and door sills, etc.

Dusting brush: for delicate surfaces.

Upholstery tool: for carpet, upholstery, stairs, etc.

TurboBrush (Model: V-096TB/V-096X only): for pet hair and larger carpeted areas. (**NOTE:** not recommended for hard floors).

Hard floor tool (Model: V-096X only): for hard floor, parquet and laminate coverings.

Mini TurboTool (Model: V-096TT/V-096TB/V-096X only): for pet hair, stair and upholstery cleaning.

X-tend (Model: V-096X only): for bottom-to-top stair cleaning.

1. The hose fits directly into the hose inlet on the vacuum cleaner.
2. The handle fits directly on to the telescopic extension tube.
3. To release the extra length hose, press the release clips located on the handle.

6. Dirt Container & Filters: Removal & Replacement

IMPORTANT: Always unplug the vacuum cleaner from the electrical outlet before removing the dirt container.

IMPORTANT: Do NOT use the vacuum cleaner without ALL of the filters in place.

Emptying the Dirt Container

1. Lift the two buttons located either side of the carry handle (under the top cover) (Fig.6/1). Lift up the top cover and pull out the dirt container.

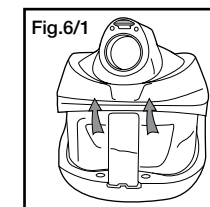 


Fig.6/1

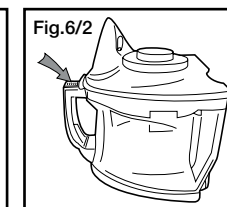 


Fig.6/2

2. Press the button as indicated (Fig.6/2) to empty the dirt into a rubbish bin. When all of the dirt is released, close the dirt container flap and replace the dirt container.