



 
we  clean

User Guide

Vax Service line AU: 1300 361 505

NZ: 0800 800 900

Bagless Upright

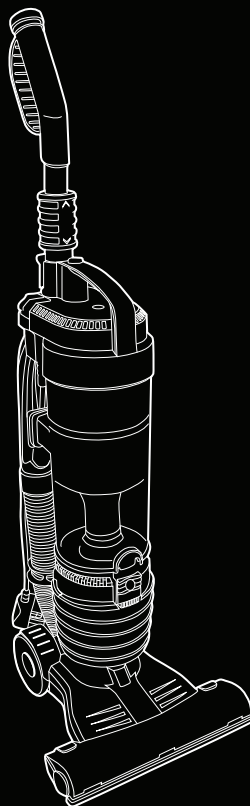

Get Cleaning...

What's your Vax's model number?

V A U 1 2 0 0 / V A R U 1 2 0 0 / V A U W 1 2 0 0

 
What's your serial number? (Located on the base of the machine)

■ - ■ ■ ■ ■ ■ ■ - ■ ■ - ■ ■ - ■ ■ - ■ ■ ■ ■ ■ ■

Note these down in case you need them in future. Please keep instructions for further use.


Machine Overview

- 1 Handle
- 2 Handle height adjuster
- 3 Upper handle release button
- 4 Dirt bin release button
- 5 Carry handle
- 6 Power on/off button
- 7 Brushbar on/off button
- 8 Inner cyclones
- 9 Dirt bin
- 10 Post motor filter release button
- 11 Brushbar blockage indicator
- 12 Brushbar access clips
- 13 Rotating brushbar
- 14 Hose to extension tube connector
- 15 Quick release cord wrap
- 16 Cord
- 17 3-in-1 crevice, upholstery & dusting brush tool
- 18 Wheels
- 19 Hose to machine connector
- 20 Brushbar reset button

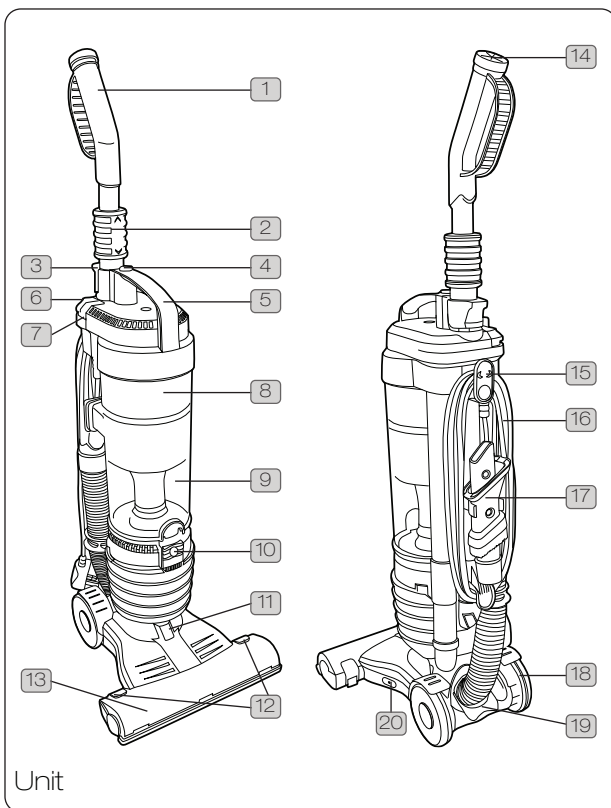

Accessories

 Filters

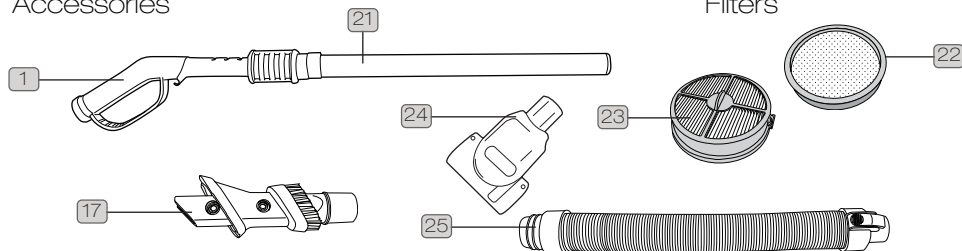

- 21 Telescopic extension tube
- 22 Pre-motor filter

- 23 Post motor filter
- 24 Turbo tool
(on VARU1200 model only)

- 25 Extension hose
(VARU1200 model only)

General Safety Information

FOR HOUSEHOLD USE ONLY.

When using the vacuum cleaner, basic safety precautions should always be observed, including the following:

1. Only use the vacuum cleaner indoors on dry surfaces.
2. Turn off the vacuum cleaner controls before disconnecting or connecting from the mains supply.
3. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories.
4. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Use only as described in this manual. Use only Vax recommended attachments.
7. Do not use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not use the vacuum cleaner with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Do not pull or carry by cord. Do not use the cord as a handle, close a door on the cord or pull cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
9. Do not handle the plug or vacuum cleaner with wet hands. Do not use outdoors or on wet surfaces.
10. Do not put any objects into openings. Do not use with any openings blocked and do not restrict airflow. Keep all openings free of dust, lint, hair or anything that might reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not pick up hot coals, cigarette butts, matches or any hot, smoking or burning objects.
13. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use

in the presence of explosive liquids or vapours.

14. Do not vacuum up harmful or toxic material (chlorine, bleach, ammonia, drain cleaner etc.).
15. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.
16. Do not use without ALL of the filters in place.
17. Take extra care when vacuuming on stairs.
18. Keep vacuuming area well lit.
19. Store the vacuum cleaner in a cool, dry area.
20. Turn off the on/off switch before unplugging the vacuum cleaner
21. Use only SAA approved 10 amp extension cords. Non-approved cords may overheat. Care should be taken to arrange the cord so that the cord cannot be tripped over.



WARNING: Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.



CAUTION: The vacuum cleaner is a very powerful unit. Before plugging the cord into the electrical outlet, make sure the switch is in the 'off' position. Hold the vacuum cleaner firmly when starting and in use.



IMPORTANT: If the inlet, hose or telescopic tube is blocked, switch off the vacuum cleaner and remove the blockage(s) before re-starting the vacuum cleaner.



IMPORTANT: Cleaning filters improves vacuum performance. Vax recommends that your filters should be checked and cleaned periodically. If your filters are washable make sure they are completely dry before inserting back into the vacuum cleaner.



 
IMPORTANT: The motor is equipped with a thermal cut-out. If for any reason the unit should overheat, the thermostat will automatically turn the unit off. Should this occur, unplug the vacuum cleaner from the electrical outlet and turn off the switch. Remove dirt container and empty. Clean filters. Allow the unit to cool for approximately one (1) hour. To re-start, plug into an electrical outlet and switch back on.

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.

Operation



Keep your Vax like new

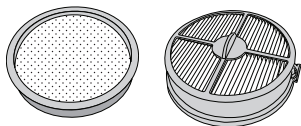


! **IMPORTANT:** The condition of the filters affects the performance of your machine. Please check and clean filters periodically (depending on the level of use). For full cleaning instructions, see page 6.

! **IMPORTANT:** Do not use the vacuum cleaner without all of the filters in place.

  
Assembling your vacuum cleaner

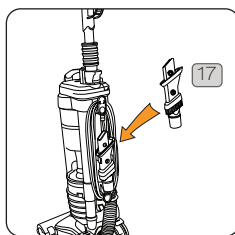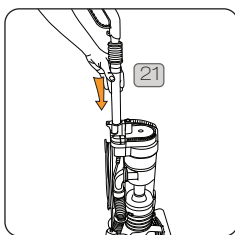


Operating the appliance

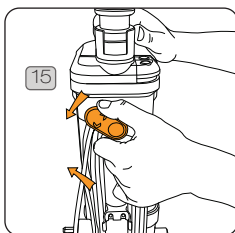 


Twist cord hook to release cord.

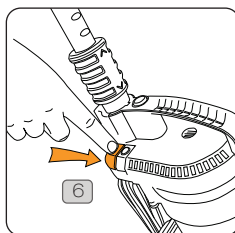 


Turn unit on.

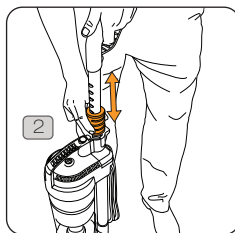 

Adjust handle height.

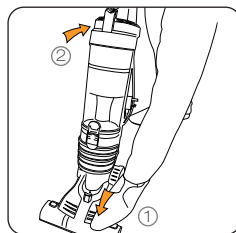 

Recline unit.

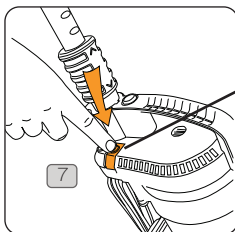 

Brushbar on - carpets.
Brushbar off - hard floors.

 
! **IMPORTANT:** Switching the brushbar on whilst cleaning hard floors may damage flooring.

Operation


Using accessories

NOTE: The crevice tool, dusting brush and upholstery tool can all be attached to the telescopic tube or directly to the hose.



Attaching to hose

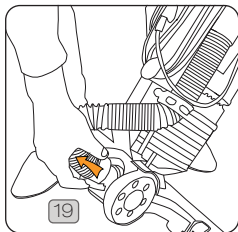

Remove hose.

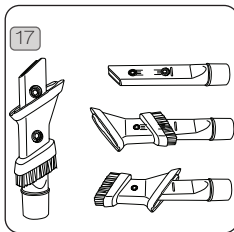 


  Choose an accessory.
Turbo tool VARU1200 only

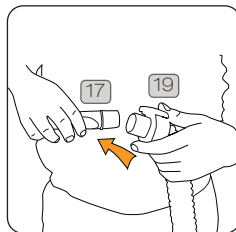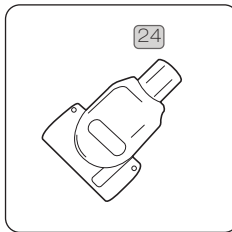


Attach accessory to hose.

 
Attaching to telescopic extension tube

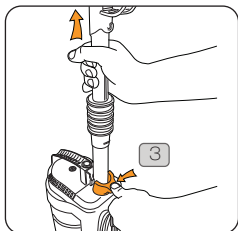


Remove telescopic extension tube.

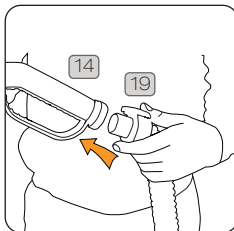 

 Attach hose to telescopic extension tube.

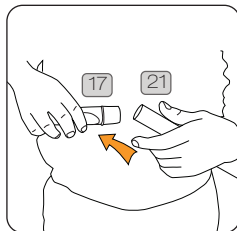


 Attach accessory to telescopic extension tube.

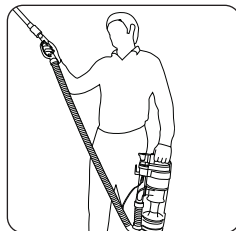


IMPORTANT:
Hold unit while using hose or telescopic extension tube.

 
Using the stretch hose (Not standard for all models - the VARU1200 model only)

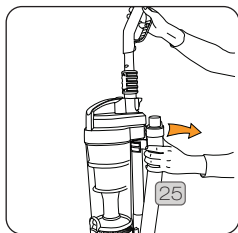


Remove stretch hose

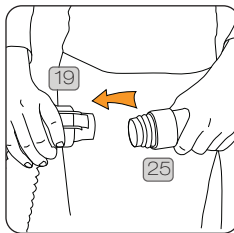 

 Attach stretch hose to the existing base hose.

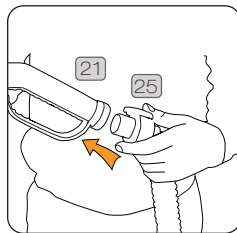

 
Attach stretch hose to telescopic extension tube.

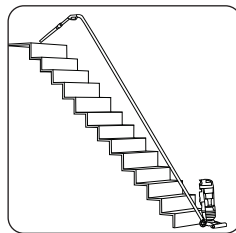

Hose can now be extended for stair cleaning

Maintenance (Keep your Vax as good as new)

 Emptying and cleaning the dirt container

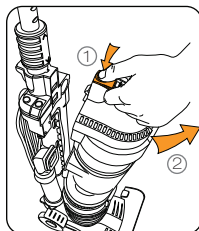

Lift off canister



 
Press the release button on canister to empty




Advanced cleaning

Slide out the cyclone separator. Tap over a bin to remove excess dirt or use a brush to gently clean separator.


Cleaning the pre-motor filter

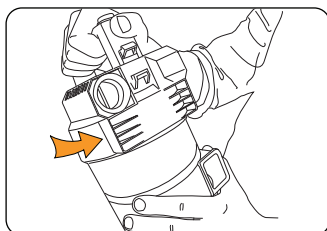


Twist the canister lid

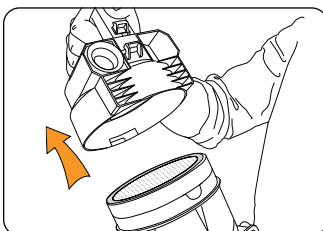 


Lift off lid

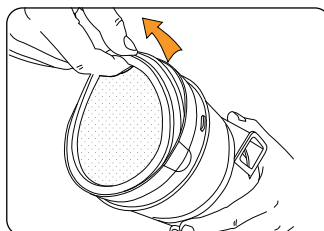 

 
Pull out the filter from the canister base

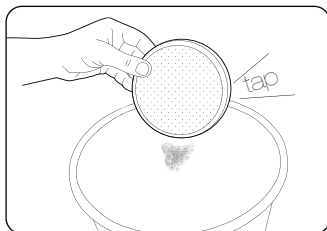

Tap over a bin to remove excess dirt

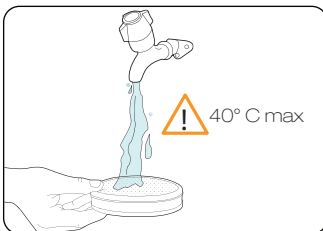 


 Wash filter with warm tap water - no hotter than 40°C

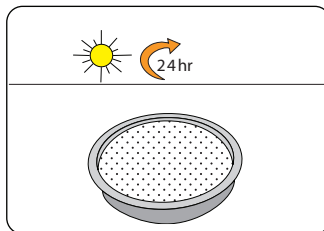


Allow to dry for 24hrs

 
Cleaning the post-motor filter **WARNING:** Do not wash the post-motor filter.

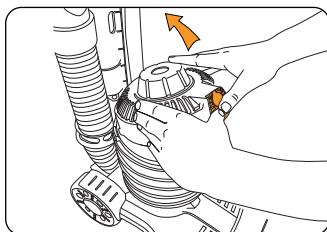

 Press the release clip at the front of the filter cap

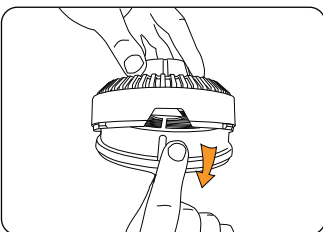

Separate filter from the holder

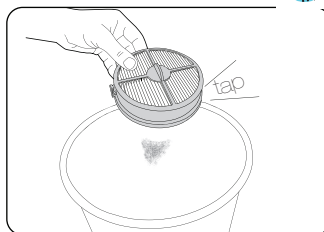 

Tap over bin to clean

Maintenance (Keep your Vax as good as new)

 
 
 
Removing blockages from the brushbar

WARNING: To reduce the risk of electric shock, turn the vacuum cleaner off and unplug from the electrical outlet before performing maintenance/troubleshooting checks.

Disconnect the hose from the vacuum cleaner and remove any blockages found then reconnect the hose securely.




Resetting jammed brushbar

A red flashing light will indicate a jammed brushbar. To reset press the button on the side of your vacuum.

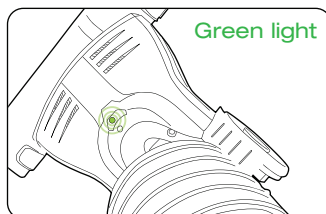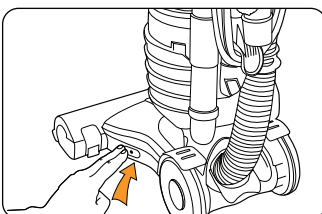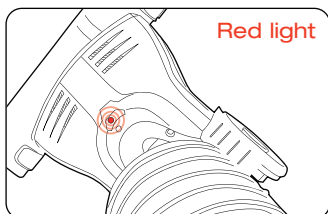

Removing debris from the brushbar

   
If the light continues to flash red after resetting, the brushbar may still be blocked. Using a pair of scissors, cut through any threads or hairs caught around the brushbar. To access brushbar:

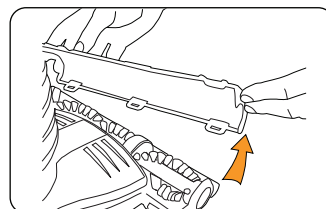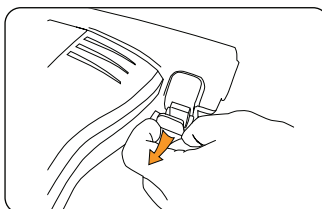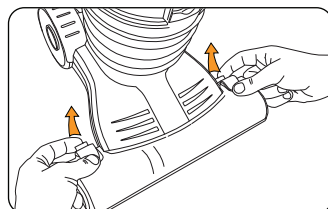


Press the brushbar reset button again to ensure the blockage is fully cleared.

IMPORTANT: for your safety, never try to access / replace brush bar drive belt. If problem persists please call our careline: AU: 1300 361 505 / NZ: 0800 800 900

 
Removing blockages from the TurboTool (VARU1200 model only)

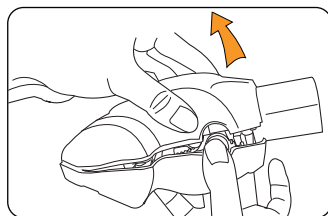

 Press the two side buttons together and pull apart

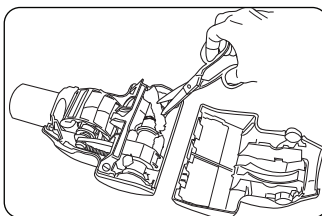

 Carefully use scissors to cut out the blockage

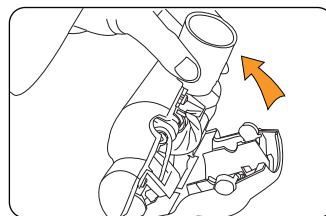

Realign turbo brush sides and press together

FAQs



WARNING: to reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/troubleshooting checks.

Is there an accessory missing?

- Check the 'Machine Overview' page in this guide to make sure the part is definitely included in your unit.
- If it is missing, we're here to help. Simply call us on
AU: 1300 361 505 / NZ: 0800 800 900

Why won't the accessories pick up properly?

- The accessory may be blocked: Refer to the Maintenance section (Page 7).
- The accessory may be faulty: call our Vax Careline to order a replacement:
AU: 1300 361 505 / NZ: 0800 800 900

Why won't the vacuum cleaner pick up?

- The filters may be clogged: Refer to the Maintenance sections (Page 6).
- The Dirt Container is full or blocked: Refer to the Maintenance sections (Page 6).
- The Dirt Container may be incorrectly installed: Refer to the Maintenance sections (Page 6).
- The brushbar may be blocked: Refer to the maintenance section (Page 7).

Why will the vacuum cleaner not run?

- It may not be plugged into the electrical outlet correctly. Ensure that the plug is pushed into the electrical outlet securely.
- The electrical outlet may not be working. Check the fuse or breaker and consult an electrician.
- The motor Thermostat may have tripped. Switch off and unplug the vacuum cleaner. Leave for one hour before switching the vacuum cleaner back on.

Why is dust escaping from the vacuum?

- The filters may not be installed correctly: Refer to the Maintenance sections (Page 6).
- The Dirt container may be incorrectly installed: Remove the Dirt Container from the unit by pressing the Dirt Container Release Button (Page 6) and reattach it to the unit, ensuring it is locked firmly back into place.
- The filters may be clogged: Refer to the Maintenance sections (Page 6).

Why isn't my brushbar rotating?

- The brushbar may not be turned on. Refer to the operation section (Page 4).
- The unit may not be reclined. Refer to the operation section (Page 4).
- The brushbar may be jammed. Refer to the maintenance section for how to reset the brushbar (Page 7).

What do I do if an accessory/the unit becomes damaged or broken?

- Visit www.vax.com.au for where to purchase parts and spares.
- Or call our Vax careline
AU: 1300 361 505 / NZ: 0800 800 900

Why is there a red light on the nozzle?

- The brushbar may be jammed. Refer to the maintenance section for how to reset the brushbar (Page 7).
- If the red light still shows, we're here to help. Simply call us on:
AU: 1300 361 505 / NZ: 0800 800 900

Visit www.vax.com.au or call on AU: 1300 361 505 / NZ: 0800 800 900 for information on where to purchase parts and spares.



we  to help

Don't take your machine back to the shop, simply contact us

www.vax.com.au

**AU: 1300 361 505
NZ: 0800 800 900**

Other Information

Vax Service & Help

Vax Customer Careline AU: 1300 361 505 / NZ: 0800 800 900

Monday-Friday 8.30am to 5.00pm

Any queries or concerns about using the Vax, call the Vax Careline. Calls are charged at the standard national rate.

Please make a note of the serial number and model number of the carpet cleaner before calling. For the nearest Service Agent, please call the Vax Customer Careline or visit www.vax.com.au

Technical Specification

Voltage:	220-240V ~50Hz	
Wattage:	1200 W	
Capacity:	1.5L	
Filters:	Pre-motor filter (washable) HEPA 12 Antibacterial post-motor filter (lifetime – tap to clean)	

	VAU1200 / VAUW1200	VARU1200
Cord length:	6m	10m
Product weight:	4.9kg	5.3kg
Packaged weight:	7.1kg	7.7kg

Subject to technical change without notice.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



we  clean

Distributed by Techtronic Industries Pty. Ltd.
Level 1, 660 Doncaster Rd, Doncaster, Australia 3108.
www.vax.com.au. Service Line: AU: 1300 361 505 / NZ: 0800 800 900