

 


Performance is everything.™

User Guide

Vax Careline: AU: 1300 361 505
NZ: 0800 800 900

Bagless Cylinder

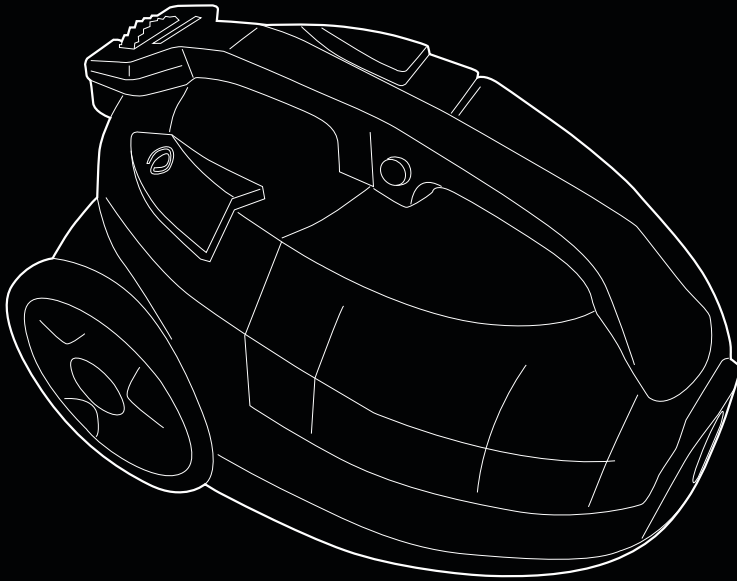

Get Cleaning...

What's your Vax's model number?

 
V C - 1 0 0 2

What's your serial number? (Located on the base of the machine)

Note these down in case you need them in future. Please keep instructions for further use.


Vax Careline: AU: 1300 361 505
NZ: 0800 800 900

Machine Overview

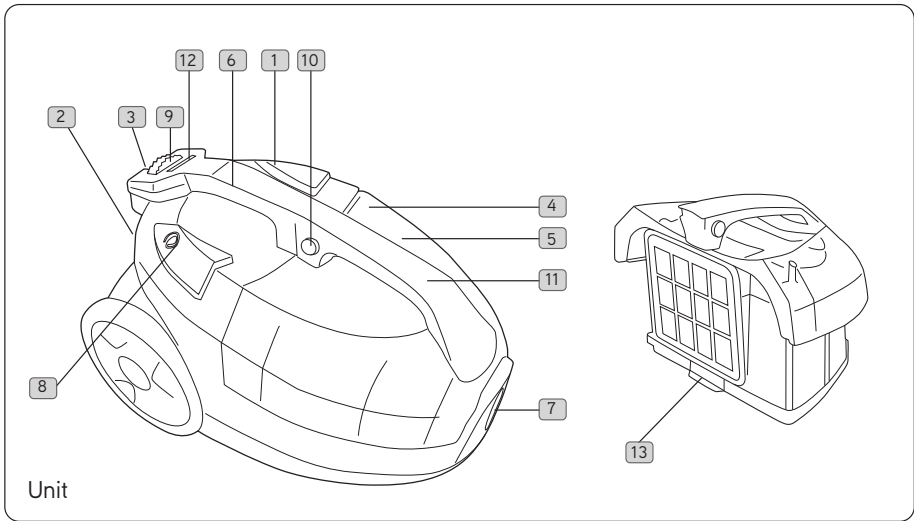

Unit

- | | | |
|-------------------------------------|---|---|
| 1 On / off button | 6 Carry handle | 11 Dirt container carry handle |
| 2 Post-motor filter (hidden) | 7 Hose inlet | 12 Blockage indicator |
| 3 Floor tool parking slot | 8 Auto cord rewind | 13 Dirt container quick release button |
| 4 Pre-motor filter (hidden) | 9 Variable power | |
| 5 Dirt container | 10 Dirt container release button | |

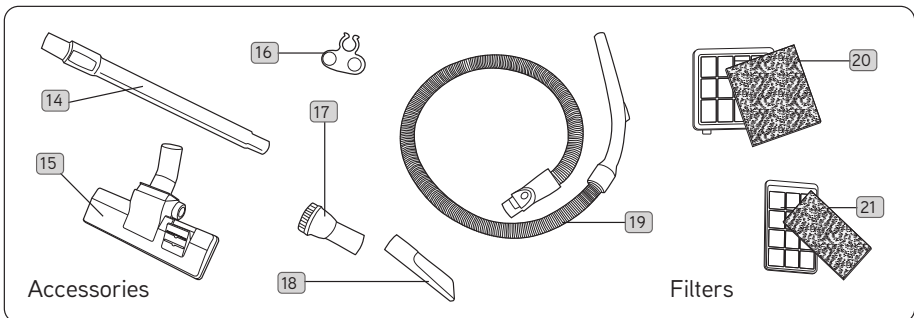 

Accessories

Filters

- | | | |
|-------------------------------------|------------------------------------|---------------------------------|
| 14 Telescopic extension tube | 17 Dusting brush | 20 HEPA pre-motor filter |
| 15 Combination floor head | 18 Crevice tool | 21 Post motor filter |
| 16 Tool caddy | 19 Flexible hose and handle | |

General Safety Information

FOR HOUSEHOLD USE ONLY.

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

Please keep instructions for further use.

When using the vacuum cleaner basic safety precautions should always be observed, including the following:

1. Only use the vacuum cleaner indoors on dry surfaces.
2. Turn off the on/off switch on the vacuum cleaner controls before disconnecting or connecting from the mains supply.
3. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories.
4. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and understands the hazards involved.
6. Cleaning and maintenance shall not be made by children.
7. The appliance should only be used as described in the quick start guide or in the full user guide.
8. Only Vax recommended attachments should be used with this appliance.
9. Do not use this vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not use this vacuum cleaner with a damaged cord or plug.
10. Do not pull or carry this appliance by the cord. Do not use the cord as a handle, close a door on the cord or pull the cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
11. Do not handle the plug or the vacuum cleaner with wet hands.
12. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
13. Do not pick up any hot coals, ash, cigarette butts, matches or any hot, smoking or burning objects.
14. Do not pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use in the presence of explosive liquids or vapours.
15. Do not vacuum harmful or toxic material (chlorine, bleach, ammonia, drain cleaner etc.).
16. Do not vacuum hard or sharp objects such as glass, nails, screws, coins etc.

17. Do not vacuum plaster dust, concrete dust or any other building or vitreous materials.
18. Do not vacuum flour, baking soda or any other powder-based carpet refresher or deodoriser.
19. Store the vacuum cleaner in a cool, dry area.
20. Use only SAA approved 10amp extension cords. Non-approved cords may overheat. Care should be taken to arrange the cord so that the cord cannot be tripped over.
21. Do not put any objects into openings. Do not use with any openings blocked and do not restrict airflow. Keep all openings free of dust, lint, hair or anything that might reduce airflow.
22. Do not use the vacuum cleaner with blocked filters and without all of the filters in place.
23. Take extra care when positioning the vacuum cleaner on the stairs.
24. Please ensure that the brushbar is turned off when you are vacuuming on the stairs.
25. Keep vacuuming area well lit.



WARNING: Always switch off and unplug the vacuum cleaner from the electrical socket before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.



CAUTION: The vacuum cleaner is a very powerful unit. Before plugging the cord into the electrical socket, make sure the switch is in the 'off' position.



IMPORTANT: If the inlet, hose or telescopic tube is blocked, switch off the vacuum cleaner and remove the blockage(s) before re-starting the vacuum cleaner.



IMPORTANT: Vax recommends the use of Residual Current Device Rating of 30mA or less.



IMPORTANT: It is very important that filters are kept clean to obtain maximum performance from your vacuum cleaner. Not cleaning and not replacing your filters regularly can reduce the suction power and cause overheating and permanent damage to the vacuum cleaner.

General Safety Information



NOTE: If the supply cord is damaged it must be replaced by the manufacturer, or a similarly qualified person in order to avoid hazard, or invalidating the warranty.



IMPORTANT: The motor is equipped with a thermal cut-out. If for any reason the unit should overheat (eg. from blocked nozzles, a full dust container or unclean filters), the thermostat will automatically turn off the switch. Should this occur, unplug the vacuum cleaner from the electrical socket and turn off the switch. Remove dirt container and empty. Clean filters. Allow the unit to cool for approximately one (1) hour. To re-start, plug into an electrical socket and switch back on.

 
DAMAGE TO THE VACUUM CLEANER CAUSED AS A DIRECT RESULT OF NOT ADHERING TO THE GENERAL SAFETY INFORMATION AND THE INSTRUCTIONS IN THIS USER GUIDE INVALIDATES THE WARRANTY

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Operation






Keep your Vax like new

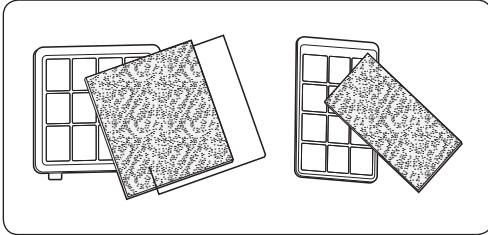

! **IMPORTANT:** The condition of the filters affects the performance of your machine. Please check and wash filters periodically (depending on the level of use). For full cleaning instructions, see page 7.

! **IMPORTANT:** Do not use the vacuum cleaner without all of the filters in place.

     
Assembling your vacuum cleaner

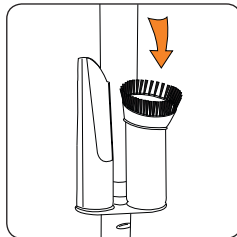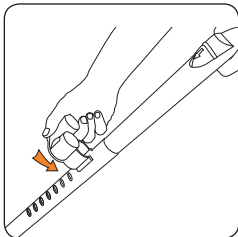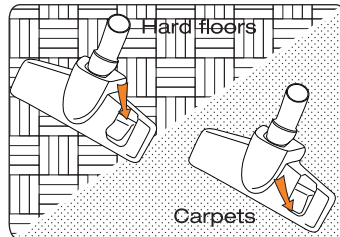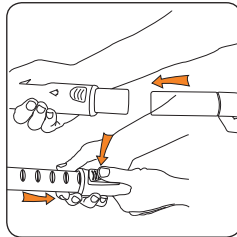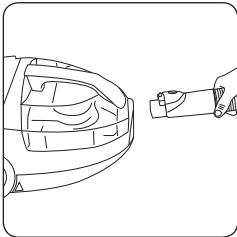


NOTE: The crevice tool, dusting brush and combination head can all be attached to the telescopic tube or hose handle.

NOTE: Two of the additional tools (crevice tool and dusting brush) can be stored in the tool caddy for convenience.

 
Operating the appliance

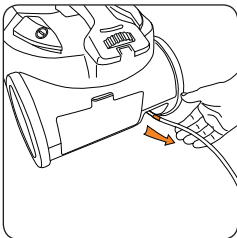

 NOTE: Fully unwind the power cord. A yellow mark on the cord indicates the recommended cord length. Do not exceed the cord length beyond the yellow mark.

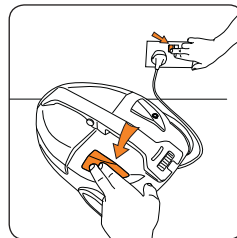



Switching on.

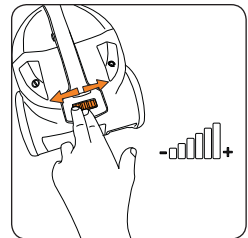 

Using variable power.






Maintenance (Keep your Vax as good as new)

  Packing away and storage

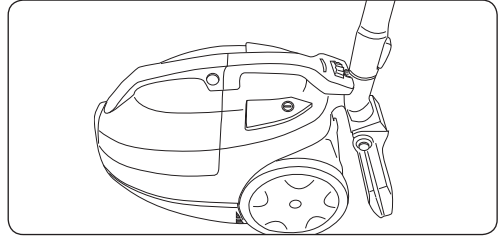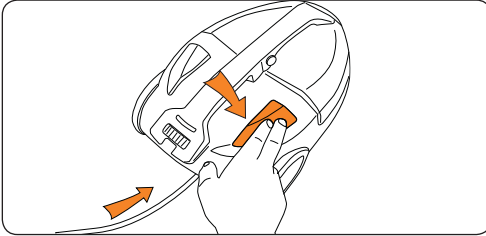

NOTE: For convenience there is a parking slot located at the rear of the vacuum cleaner where the floor tool and tubes can be attached for storage and carrying.

 
 
 
 
 
Emptying and cleaning the dirt container

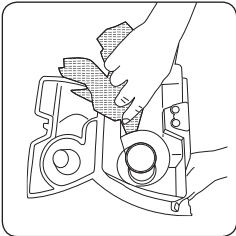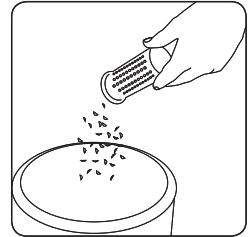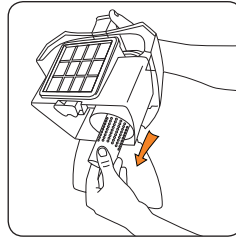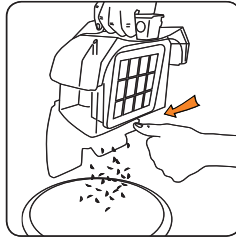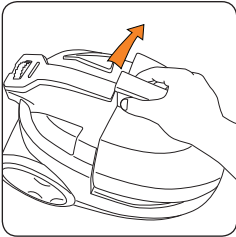

NOTE: Lift out the dirt container and empty contents over the bin. Remove central separator and tap dirt loose. This inside container can be wiped clean with a cloth.





Maintenance (Keep your Vax as good as new)

     Cleaning the HEPA pre-motor filter

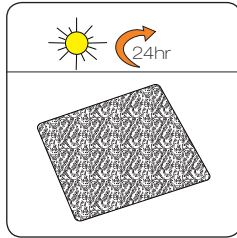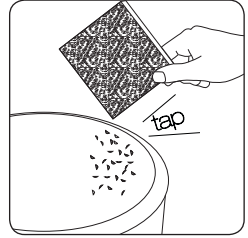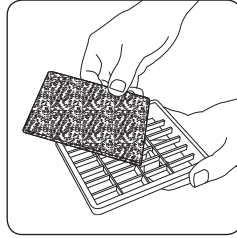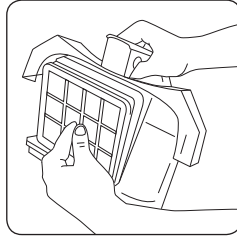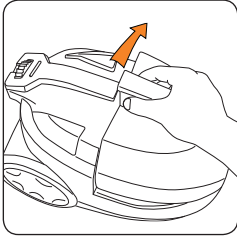

NOTE: Remove the dirt container from the machine and take out the filter from the back. Tap over a bin to clean or if required it can be rinsed under warm water. Allow 24 hours to dry completely before placing it back in the machine.

    
Cleaning the post-motor filter

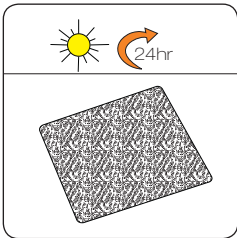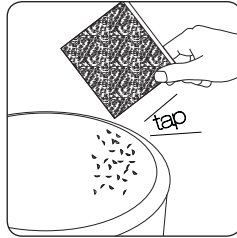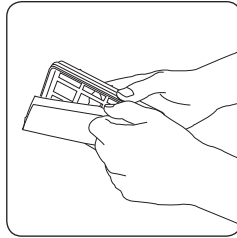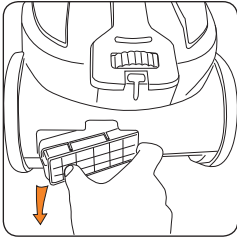

NOTE: Remove filter from the back of the cylinder vacuum. Separate the filter and then tap over a bin to clean or if required it can be rinsed under warm water. Allow 24 hours to dry completely before placing it back in the machine.

Maintenance (Keep your Vax as good as new)

Clearing blockages

 **WARNING:** To reduce the risk of electric shock, the power cord must be disconnected before performing maintenance/troubleshooting checks. Turn the vacuum cleaner off and unplug from the electrical socket.

Hose blockages

The flexible hose may be disconnected from the vacuum cleaner. Carefully remove any blockages found and reconnect the hose securely.

Accessory blockages

Remove accessory from the hose/handle tube. Carefully remove the blockage and return to the cleaner.

FAQ's



WARNING: To reduce the risk of personal injury, unplug the hard floor cleaner before performing maintenance/troubleshooting checks.

Problem	Solution
Is there an accessory missing?	Check the 'Parts Overview' page in this guide to make sure the part is definitely included in your unit.
	If it is missing, we're here to help. Simply call us on AU: 1300 361 505 / NZ: 0800 800 900
Why won't the vacuum cleaner pick up?	The dirt container may be incorrectly installed; remove the dirt container from the unit by pressing the dirt container release catch and then reattaching it to the unit, ensuring it is locked firmly back into place.
If the blockage indicator is lit:	The filter may be clogged; refer to 'Maintenance: Cleaning the filters' on page 7.
	The dirt container may be blocked; refer to 'Maintenance: Emptying and cleaning the dirt container' on page 6.
Why is dust escaping from the vacuum?	The filter may be clogged; refer to 'Maintenance: Cleaning the filters' on page 7.
	The dirt container may be blocked; refer to 'Maintenance: Emptying and cleaning the dirt container' on page 6.
	The dirt container may be incorrectly installed; remove the dirt container from the unit by pressing the dirt container release catch [10] and then re-attaching it to the unit, ensuring it is locked firmly back into place.
What do I do if the unit/an accessory becomes damaged or broken?	We're here to help. Simply call us on AU: 1300 361 505 / NZ: 0800 800 900
Why won't the accessories pick up properly?	The accessory may be blocked; switch off and unplug the unit before performing these checks. Hose blockages: remove the flexible hose from the unit. Carefully remove any blockages found and reconnect hose securely.
If the blockage indicator is lit:	Accessory blockages: remove accessory from handle/tube. Carefully remove blockage and reattach to the vacuum cleaner.
	The accessory may be faulty. Simply call us on AU: 1300 361 505 / NZ: 0800 800 900
Why will the vacuum cleaner not run?	It may not be plugged into the electrical outlet correctly; ensure that the plug is pushed in securely.
	The electrical outlet may not be working properly; check the fuse or breaker, or consult an electrician.
	The motor thermostat may have tripped; switch off and unplug the vacuum cleaner, and leave for one hour before switching the cleaner back on.

we're here to help

For troubleshooting please call or visit our website:

AU: 1300 361 505
vax.com.au

NZ: 0800 800 900
vax.co.nz

This does not affect your statutory rights.

Other Information

Vax Service & Help

Vax Careline:

Australia **1300 361 505**

New Zealand **0800 800 900**

Monday-Friday 8.30am to 5.00pm

If you have queries or concerns about using your Vax, call the Vax Careline. Calls are charged at the standard local rate. Please make a note of the serial number and model number of the vacuum cleaner before calling.

For the nearest Service Agent, please call the Vax Customer Careline or visit vax.com.au / vax.co.nz

Technical Specification

Voltage: 220-240V ~50Hz

Wattage: 2000W

Capacity: 1.5L

Filters: HEPA pre-motor filter – washable
 Post-motor filter – washable

Cord length: 5m (approx.)

Weight: 4.9kg



Performance is everything.™

Distributed by Techtronic Industries Australia Pty. Ltd.
31 Gilby Road, Mt Waverley, VIC 3149, Australia.
www.vax.com.au Careline: AU: 1300 361 505
www.vax.co.nz Careline: NZ: 0800 800 900



 
Performance is everything.™

User Guide

Vax Careline: AU: 1300 361 505

NZ: 0800 800 900

12V Handheld

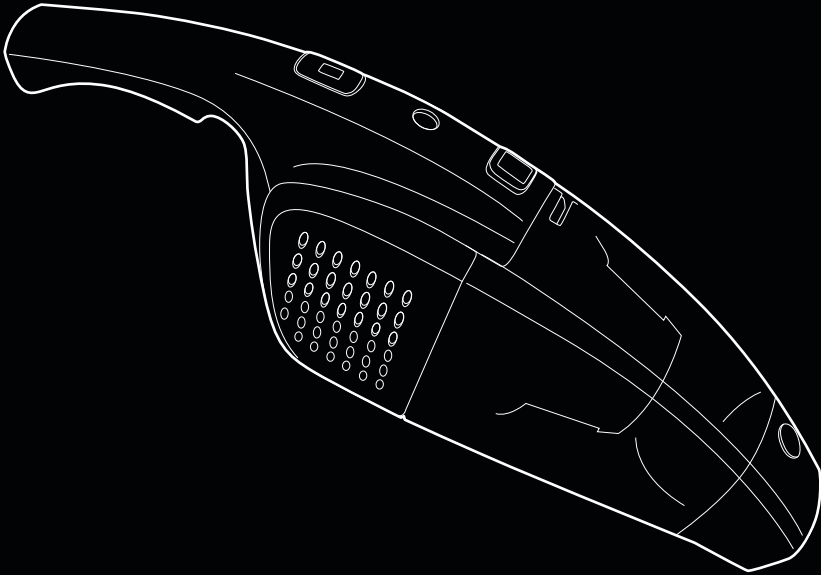

Get Cleaning...

What's your Vax's model number?

V C 0 9 0 2 H R

What's your serial number? (Located on the base of the machine)



Note these down in case you need them in future. Please keep instructions for further use.

 
 
 
vax.com.au
vax.co.nz

VC0902HR

Vax Careline: AU: 1300 361 505
NZ: 0800 800 900

Machine Overview

- 1 Nozzle release button
- 2 Dirt container
- 3 Filter
 - a) filter shroud
 - b) filter
- 4 Dirt container release button
- 5 Charging indicator (blue LED)
- 6 On/off switch
- 7 Charging connection point
- 8 Charger
- 9 Dusting brush
- 10 Crevice tool

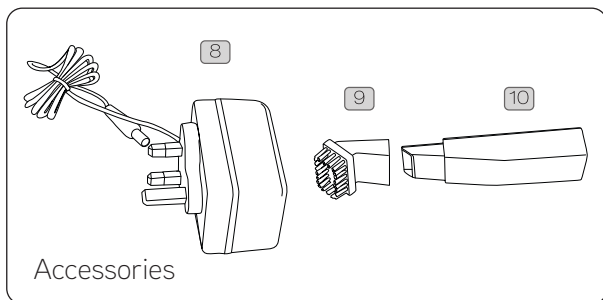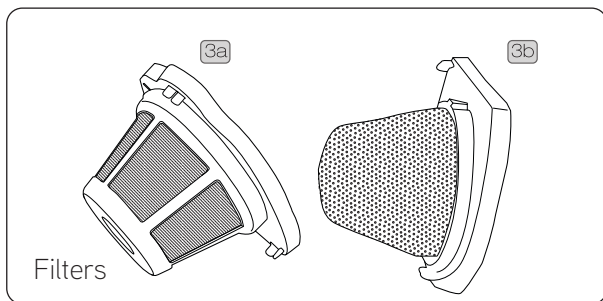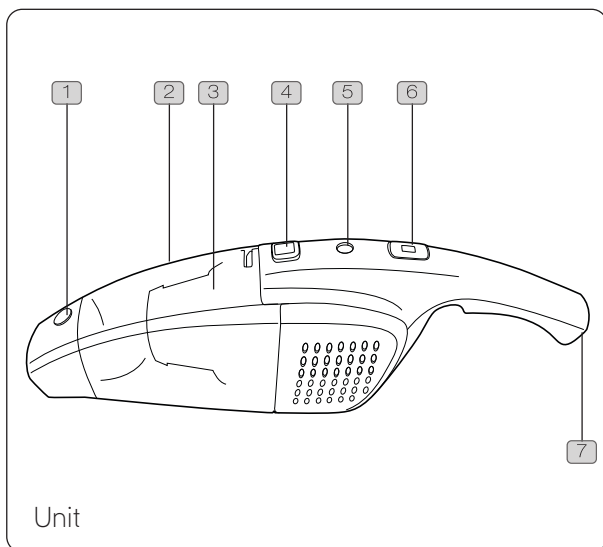

General Safety Information

FOR HOUSEHOLD USE ONLY.

When using the vacuum cleaner, basic safety precautions should always be observed, including the following:

1. Do not charge the unit outdoors.
2. Turn off the handheld before connecting or disconnecting from the mains supply.
3. Children should be supervised to ensure that they do not play with the appliance.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
5. Use only as described in this manual. Use only the manufacturer's recommended attachments.
6. Do not use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water.
7. Do not abuse the cord. Keep the cord away from heated surface. Do not pull the cord around sharp edges or corners. Do not close the cord in a door.
8. Do not handle the plug or appliance with wet hands.
9. This product contains rechargeable Nickel Cadmium batteries. Do not throw batteries into fire or expose them to high temperatures, as they may burst.
10. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not pick up hot coals, cigarette butts, matches or anything hot, smoking or burning objects.
13. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc) or use in the presence of explosive liquids or vapour.
14. Do not vacuum harmful or toxic material (chlorine bleach, ammonia, drain cleaner, etc).
15. Do not use without the filter in place.
16. Do not vacuum hard or sharp objects such as glass, nails, screws, coins, etc.
17. Do not vacuum baking soda or any other powder-based carpet refresher or deodoriser.

18. Do not vacuum plaster dust, concrete, or any other building or vitreous material.
19. Turn off all controls before unplugging.
20. Take extra care when cleaning on stairs
21. Store the appliance indoors in a cool, dry area.
22. Use only the charger supplied by the manufacturer to recharge the battery.



IMPORTANT: For dry debris use only



WARNING: Always switch off and unplug the handheld from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments or performing any maintenance.



IMPORTANT: Remove the battery from the appliance before recycling. For further information please contact your local waste management centre.



NOTE: Do not use the vacuum cleaner with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



 
IMPORTANT: Cleaning filters improves vacuum performance. Vax recommends that they should be checked and cleaned periodically (depending on level of use). Make sure all filters are completely dry before inserting back into the vacuum cleaner.

This machine is intended for household use only, and NOT for commercial or industrial use.


PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER USE.

Operation


Charging and operation

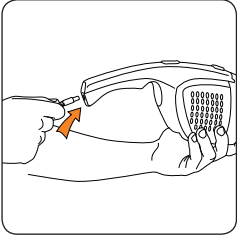

 
Plug charger into the mains and insert lead into back of unit.


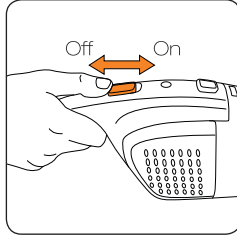


On/off switch.

 **NOTE:** The initial charging time is 15 hours. While charging, the indicator will remain a steady blue. Once fully charged, the light will flash.


 **NOTE:** Ensure the vacuum switch is in the 'off' position when charging.

  Tools

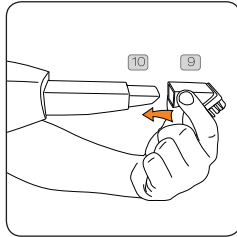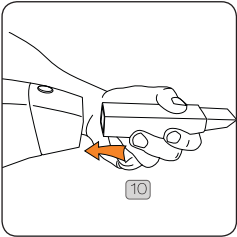


The crevice tool can be attached directly onto the nozzle. To use the dusting brush, attach to the crevice tool.

 
Emptying the dirt container

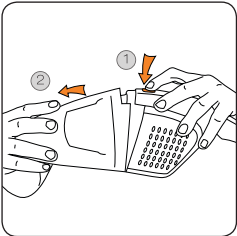

 To open, press release button to remove the dirt container.

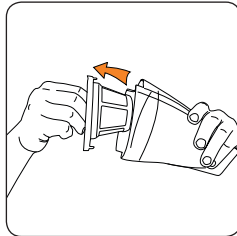


Remove filter.

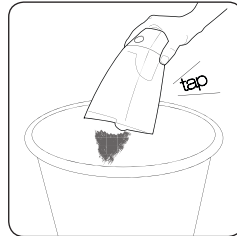 

Empty over a bin.

Maintenance (Keep your Vax as good as new)

 
Dirt container and filter maintenance

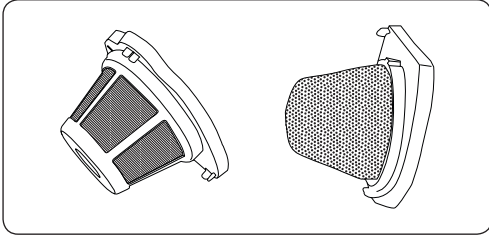


! **IMPORTANT:** The condition of the filter affects the performance of your machine. Please check and clean the filter periodically (depending on the level of use).

! **IMPORTANT:** Do not use the handheld without the filter in place.

 
Cleaning the filter

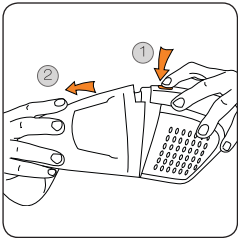

 Press dust cup release button and separate.

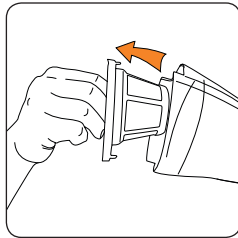


Remove the filter and shroud.

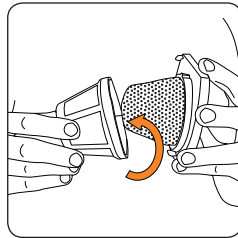 


Turn anti-clockwise to separate the filters.



 Tap filters against bin.

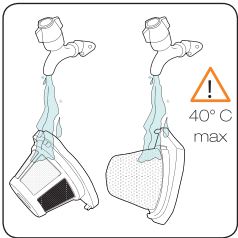

Wash filter if required.

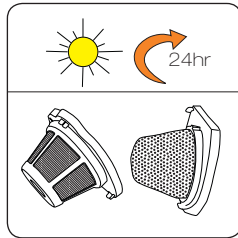 


Allow to dry for 24 hours before placing it back in the machine.


! **NOTE:** It is important that filters are kept clean to obtain maximum performance from your vacuum cleaner. Not cleaning and not replacing your filters regularly can reduce the suction power and cause overheating and permanent damage to the vacuum cleaner.

Maintenance (Keep your Vax as good as new)

 Cleaning the nozzle

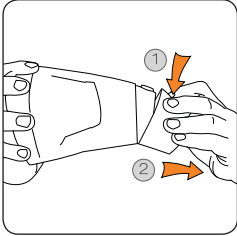


 To open, press release button and pull nozzle away from dirt bin.

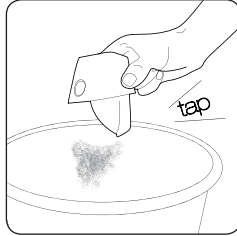


Shake excess dirt from dirt container. Tap nozzle against bin.

 To re-attach nozzle and dirt container

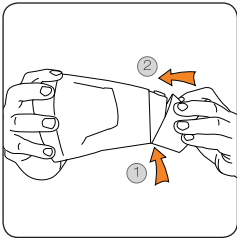

 Align bottom of nozzle with dirt container and clip on.

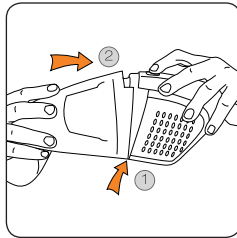

Align bottom of dirt container with main body and clip on.



NOTE: An audible 'click' can be heard when the nozzle and dirt container are re-attached correctly.



NOTE: Please ensure filter is located back in position when re-attaching nozzle and dirt container.

FAQ's



WARNING: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/troubleshooting checks.

Problem	Solution
Why will the handheld not run?	The battery may not be charged. To charge the battery, the power switch must be in the 'off' position. The static blue light shows the unit is charging. The initial charge should be for 15 hours.
	For further assistance, Simply call us on AU: 1300 361 505 NZ: 0800 800 900
Why won't the handheld pick up?	The nozzle or crevice tool may be blocked; remove the obstruction.
	The filter may be clogged or dirty; clean the filter. Refer to the Maintenance section.
	The battery charge is getting weak; let the battery run until the vacuum slows and recharges.
	The dirt container is full; empty the container.
	For further assistance, Simply call us on AU: 1300 361 505 NZ: 0800 800 900
Why won't the battery recharge?	The charger may not be inserted correctly.
	Check the mains power is switched on.
	The electrical outlet may not be working; check the fuse or breaker and consult an electrician.
	For further assistance, Simply call us on AU: 1300 361 505 NZ: 0800 800 900

we're here to help

For troubleshooting please call or visit our website:

AU: 1300 361 505
vax.com.au

NZ: 0800 800 900
vax.co.nz

This does not affect your statutory rights

Other Information

Vax Service & Help

Vax Careline:

Australia 1300 361 505

New Zealand 0800 800 900

Monday-Friday 8.30am to 5.00pm

If you have queries or concerns about using your Vax, call the Vax Careline. Calls are charged at the standard local rate. Please make a note of the serial number and model number of the vacuum cleaner before calling.

For the nearest Service Agent, please call the Vax Customer Careline or visit vax.com.au / vax.co.nz

Technical Specification

Battery Voltage: 12V

Capacity: 0.5L

Runtime: 15 minutes

Weight: 1.3kg

Charger input wattage: 230-240V ~ 50Hz , 13 Watt

Charging time: 15 hours

Filter type: Washable

Subject to technical change without notice.

Notes



Notes



Performance is everything.™

Distributed by Techtronic Industries Australia Pty. Ltd.
31 Gilby Road, Mt Waverley, VIC 3149, Australia.
www.vax.com.au Careline: AU: 1300 361 505
www.vax.co.nz Careline: NZ: 0800 800 900