



Performance is everything.™

3 year
warranty

AirTM

CORDLESS

Let's get started



VX7

vax.com.au
vax.co.nz

Let's talk safety



Basic safety precautions

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

READ ALL THE INSTRUCTIONS BEFORE USING THIS APPLIANCE

- It is a battery-operated appliance, the battery being charged outside the appliance.
- Only use the vacuum cleaner indoors and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the vacuum cleaner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should

not play with the vacuum cleaner. Cleaning and user maintenance should not be made by children without supervision

- Only Vax recommend tools and accessories should be used with this vacuum cleaner
- Keep the charger and batteries in a dry place, and use them indoors only.
- Do not use charger with damaged cord or plug. If appliance or charger is not working as it should, has been dropped, damaged, left outdoors or dropped into water, take it to a Vax authorised repair agent prior to continuing use. Please contact our Customer Care Line on: AU: 1300 361 505 / NZ: 0800 800 900 (Mon-Fri 8.30am to 5.00pm) or visit www.vax.com.au / vax.co.nz for your nearest Vax authorised repair agent.

Please keep instructions for further use.



Don'ts

- ✗ Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not place product on cord. Do not run appliance on cord.
- ✗ Don't handle the charger plug or use the vacuum cleaner with wet hands.
- ✗ Don't attempt to remove blockages with sharp objects as this may cause damage to the vacuum cleaner.
- ✗ Don't try to short the terminals of the battery and the charger.
- ✗ Don't use the vacuum cleaner with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the rating label.
- ✗ Don't vacuum up hot coals, cigarette butts, ash, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).
- ✗ Do not vacuum hard or sharp objects such as glass, nails, screws or coins etc.
- ✗ Don't not vacuum plaster dust, concrete dust or any other building or vitreous material.
- ✗ Do not vacuum flour, baking soda or any other powder-based carpet refresher or deodoriser.



Do's

- ✓ Always make sure the filter and dirt container are fitted correctly before using your vacuum cleaner.
- ✓ Always turn off and remove the battery before carrying out any maintenance.
- ✓ Turn off all controls on the vacuum cleaner before disconnecting or connecting the battery.
- ✓ Take extra care when cleaning on the stairs.
- ✓ Always protect the charger cord from heated surfaces or near open flames.
- ✓ Use only SAA approved 10amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- ✓ Always carry the vacuum cleaner by the handle.
- ✓ Store your vacuum cleaner in a cool, dry area.

CAUTION: The battery used in this device may present a risk of fire or chemical burn if mistreated.

Do not disassemble or heat above manufacturer's maximum temperature limit (60° C/140°F) or incinerate.

Replace battery with Vax battery only. Use of another battery may present a risk of fire or explosion. Dispose of used battery promptly. Keep away from children.

Do not disassemble and do not dispose of in fire. Do not attempt to disassemble the battery or remove any component projecting from the battery terminals.

The battery and charger have no user serviceable parts. Fire or injury may result.

Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting.

WARNING: For best performance terminals on battery, battery charger and vacuum cleaner must be clean and free from dust and dirt.

Do not attempt to recharge non-rechargeable batteries.

Thank you for buying this Air Cordless.

Taking care of your floors

The Air Cordless is designed to make vacuuming your floors regularly, as effective and efficient as possible and this user guide will help you get the most out of your machine.

Maintaining your floors will ensure they keep their appearance for longer and smell fresh and clean. You've chosen carpets for your home for a reason and Vax will help you take good care of them.

Taking care of your Air Cordless

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you are to tackle your floors.

Taking care of you

We're here if you need us. For trouble shooting, simply call or visit:

Australia: 1300 361 505

vax.com.au

New Zealand: 0800 800 900

vax.co.nz

Monday-Friday 8.30am to 5.00pm

Calls are charged at the standard local rate. Please make a note of the serial number and model number of the product before calling.



Performance is everything.™

Contents

Let's talk safety

Getting to know your machine

Getting started

Using your machine

Taking care of your machine

Let's talk technical

What to do if it goes wrong

Getting in touch

Accessories
& Replacement parts

Air Cordless

Included with your machine



2x LithiumLife batteries




Battery charger



2-in-1 tool

Getting to know your machine

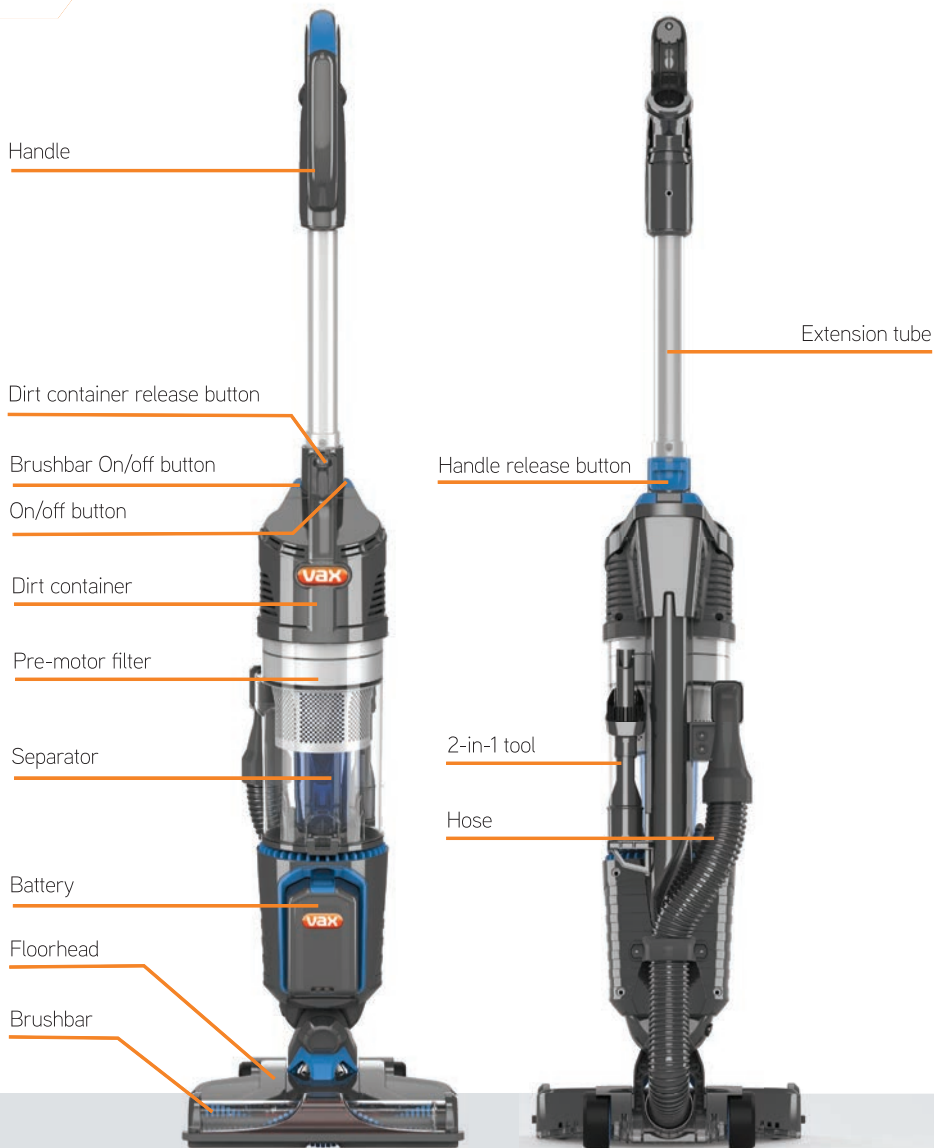

Technical Specification

Name **Vax Air Cordless**
Battery voltage **20V**
Weight **4.6kg**
Model no. **VX7**
Dirt container capacity **1.05L**

Battery Specification

Type Lithium-ion rechargeable battery pack.
Nominal voltage **18VDC**
Capacity **4AH/72Wh**
Battery Charger
Model no. **BH03200ANZ**
LithiumLife Battery
Model no. **BH03120ANZ**

Accessories & Consumables*

Pro Cleaning Kit
(additional tools not
included with this
machine)
VPCK

Filter Kit
Model no. **VX7F**

PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE

CAUTION: The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble or heat above manufacturer's maximum temperature limit (60° C/140°F) or incinerate. Replace battery with Vax battery only. Use of another battery may present a risk of fire or explosion. Dispose of used battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire. Do not attempt to disassemble the battery or remove any component projecting from the battery terminals. The battery and charger have no user serviceable parts. Fire or injury may result. Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting.

WARNING: For best performance terminals on battery, battery charger and vacuum cleaner must be clean and free from dust and dirt. Do not attempt to recharge non-rechargeable batteries.

Charging the battery



Fit the battery onto the battery charger.



The battery charger light will turn blue when charging. If a red light appears an error has occurred, remove the battery and refit.

25% Charged



50% Charged



75% Charged



The battery will be fully charged after 3 hours and the charger light will turn off.

Removing the battery



Press the release button, hold base of battery charger and lift the battery to remove.



To check how much life is left on the battery, press down on the battery button and see the battery life indicator.

IMPORTANT: The battery will need fully charging before first use.


NOTE: The life expectancy of the battery will vary depending on the usage of the vacuum cleaner. If you require a replacement battery contact us - Vax Careline: (AU) 1300 361 505 / vax.com.au **OR** (NZ) 0800 800 900 / vax.co.nz

Using your machine


Assembling your vacuum cleaner




Push the handle into the body of the vacuum cleaner. The handle will click into position when correctly fitted.

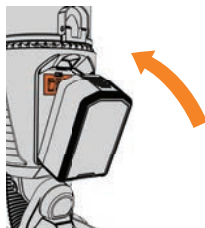

Fit the battery onto the vacuum cleaner (below the dirt container). The battery will click into position when correctly fitted.

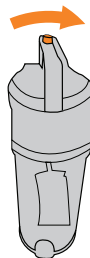

Remove the filter insert by pressing the dirt container release button, remove dirt container off the vacuum cleaner, turn the dirt container lid anti-clockwise to remove the filter insert.

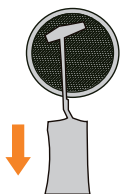


Remove tag attached to filter. Then refit the filter with the tab at the bottom into vacuum cleaner.




The battery can remain on the battery charger once fully charged. You may want to charge the spare battery so it is ready to use.

Using your machine

Using your Air Cordless

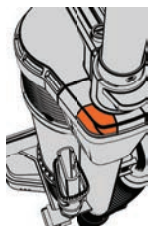

Press the on/off button to turn the vacuum cleaner on.

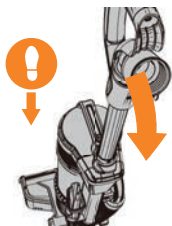

Place your foot on the base and pull backwards to recline.



Press the brushbar button to activate the brushbar when vacuuming carpets.



Stand the vacuum cleaner in the upright position to use the hose. The brushbar will stop.




IMPORTANT

The brushbar should be ON for carpets and OFF for hard floors.


Using your machine

Using your extension tube


IMPORTANT: When cleaning stairs to prevent the vacuum cleaner falling always place the vacuum cleaner at the bottom of stairs on the floor. Do not place the vacuum cleaner on stairs or furniture.

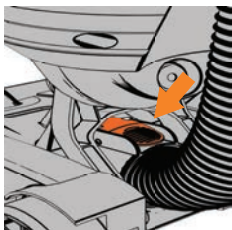

Remove hose from base of the vacuum cleaner.

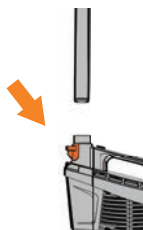

Press handle release clip and remove handle.

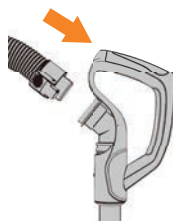

Attach hose to handle .



Attach required tool to the handle.



Remove tool and replace handle and hose into the vacuum cleaner after use.



Use the handle on the top of the dirt container lid to carry the vacuum cleaner.


The brushbar will not rotate when the vacuum cleaner is in the upright position.

Taking care of your machine


IMPORTANT: Turn the machine off and remove battery from the machine, before carrying out any maintenance on your machine.

IMPORTANT: For best cleaning results filters require cleaning every 4-6 uses or as needed. Do not use your vacuum cleaner with a clogged filter and without the filter in place.


Emptying and cleaning the dirt container

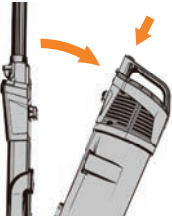

Press dirt container release button to remove dirt container.

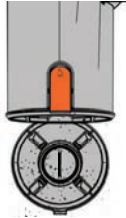

Hold dirt container over a bin, press the dirt release button to open, allow the dirt to fall out.

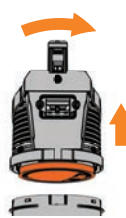


Turn the dirt container lid anti clockwise to remove.



Pull the filter tab to remove the filter.




To clean, tap the filter over a bin to remove any dirt/debris. or until **fully dry** before replacing. Wash the filter under running water (40 degrees max).

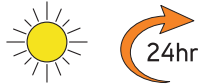

Using a soft brush or cloth remove any dirt/debris from separator.


Cleaning terminals

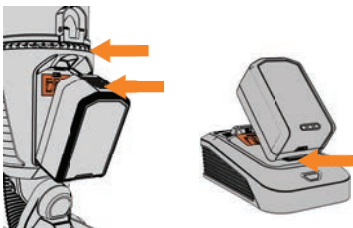


Using a dry cloth or soft dusting brush remove any dust/debris from terminals on battery charger, battery and vacuum cleaner.

Let's talk technical


Clearing a blockage from the brushbar

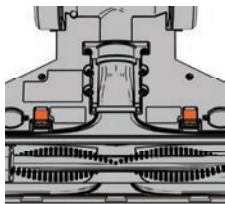

Remove battery and lie the vacuum cleaner flat. Squeeze the brushbar clips towards the brushbar and lift off brushbar cover.

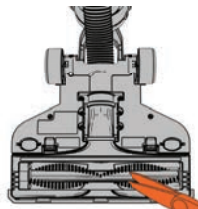


Using a pair of scissors cut any hair or debris from around the brushbar.

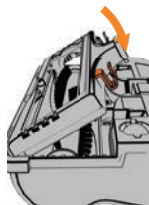

Replace the brushbar cover by clicking into place.

IMPORTANT: If the brushbar has been obstructed the Motor Protection Sensor may have been activated. Remove the battery and clear any obstruction. Wait 30 minutes for the vacuum cleaner to reset itself. Replace the battery, recline and switch on the vacuum cleaner. If the brushbar still does not turn press the brushbar on /off button.

Changing the brushbar – additional brushbars are available at vax.com.au/vax.co.nz

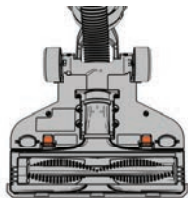

Remove battery and lie the vacuum cleaner flat. Squeeze the brushbar clips towards the brushbar and lift off brushbar cover.



Standard brushbar
(included with this machine)




Multi-floor brushbar*




Hard-floor brushbar*


Choose brushbar.

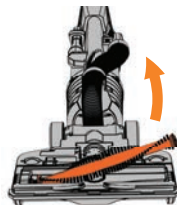

Remove brushbar firstly lifting the side of brushbar not connected to belt.

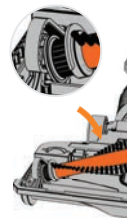

Replace brushbar, fitting the belt to the brushbar first. Then aligning both sides of the brushbar into base.

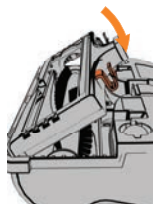

Replace the brushbar cover by clicking into place.

***TIP:** Multi-floor brushbar has longer, softer bristles designed for all round cleaning on carpets and hard floors. Hard-floor brushbar has extra soft bristles, designed specifically for the gentle removal of dirt/debris from hard floors. To purchase go to vax.com.au / vax.co.nz or call the Vax Careline on AU: 1300 361 505 / NZ: 0800 800 900

What to do if it goes wrong

Problem

Solution

Why does my vacuum cleaner have no power?

- Check the battery is inserted correctly into the vacuum cleaner.
- The battery may not be charged, remove and charge battery.
- Battery might be too hot, remove and allow to cool for 30 minutes. Replace battery.
- The motor thermostat may have tripped. If this has happened, switch off the vacuum cleaner. Remove and empty the dirt container and check for blockages. Clean the filters and allow the vacuum cleaner to cool for approximately 1 hour (if you have washed the filters you will need to wait 24 hours for the filters to fully dry before putting them back into the vacuum cleaner).

Why won't the vacuum cleaner pick up?

- Empty the dirt container and clean filters. Go to 'Taking care of your machine.'
- There may be a blockage in the vacuum cleaner. Check hose, handle and brushbar.
- The brushbar may not be turning. Go to 'Why isn't my brushbar turning?' below.

Why isn't my brushbar turning?

- The brushbar may not be switched on, please check the brushbar on/off switch.
- The brushbar may be obstructed. Go to 'Let's talk technical.'

Why isn't the battery charger light lit when the battery is charging?

- Check the battery charger is plugged in.
- Check the battery is inserted correctly into the charger.
- The battery may not be connecting with the charger. Remove battery and unplug charger, wait 10 seconds then retry.

Why is the battery charger light continually flashing?

- Check the battery is inserted correctly into the charger.
- The battery or charger has an error. Remove the battery and unplug charger, wait 10 seconds then plug charger into socket and reinsert the battery.
- Check terminals on battery and vacuum cleaner are clean. Go to 'Let's talk technical.'

Warning: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance /troubleshooting checks.

Getting in touch

Taking care of you

We're here if you need us. For trouble shooting, simply call or visit:

Australia: 1300 361 505*

vax.com.au

New Zealand: 0800 800 900*

vax.co.nz

*Monday-Friday 8.30am to 5.00pm

* Calls are charged at the standard local rate. Please make a note of the serial number and model number of the vacuum cleaner before calling.

Don't forget your accessories!

Order at: www.vax.com.au / www.vax.co.nz

Pro Cleaning Kit Model no. VPCCK

Crevice tool

For awkward gaps and crevices.

Upholstery attachment

Gently cleans large areas of upholstery, curtains, sofas and chairs.

Pet hair removal attachment

Tackles stubborn pet hair on furniture, rugs and carpets.

Stubborn dust brush attachment

Removes built up dust from skirting, banisters and corners.



Radiator Tool

Long slim design, is perfect for cleaning behind and inside the radiator.



Up Top Tool

Ideal for reaching those hard to reach high areas.



Mattress Tool

Quickly and easily removes embedded dust from mattresses.



Soft Brush

Gently removes dust and dirt from delicate surfaces such as tiles and glass without scratching.



Battery Charger

Model no. BH03200ANZ



LithiumLife Battery

Model no. BH03120ANZ

LithiumLife battery technology brings power and cordless convenience for whole-home cleaning.



Filter

Model no. VX7F





Performance is everything.™

Distributed by Techtronic Industries Australia Pty. Ltd.
31 Gilby Road, Mt Waverley, VIC 3149 Australia.
www.vax.com.au Careline AU: 1300 361 505
www.vax.co.nz Careline NZ: 0800 800 900